




Glass Adjustment


NOTE:

- Place the vehicle on a firm, level surface when adjusting the glass.
 - Check the weatherstrips and glass run channel for damage or deterioration and replace if necessary.
1. Remove the door panel and peel off the plastic cover (see pages 20-4, 5, 13, 14).
Remove the power window switch from the door panel.
Driver's: see page 20-5.
Passenger's/Rear door: see page 20-14.
 2. Connect the power window switch connector to the door harness connector.
 3. Loosen the roller guide bolts and adjust the glass so it is parallel with the glass run channel.

Front:

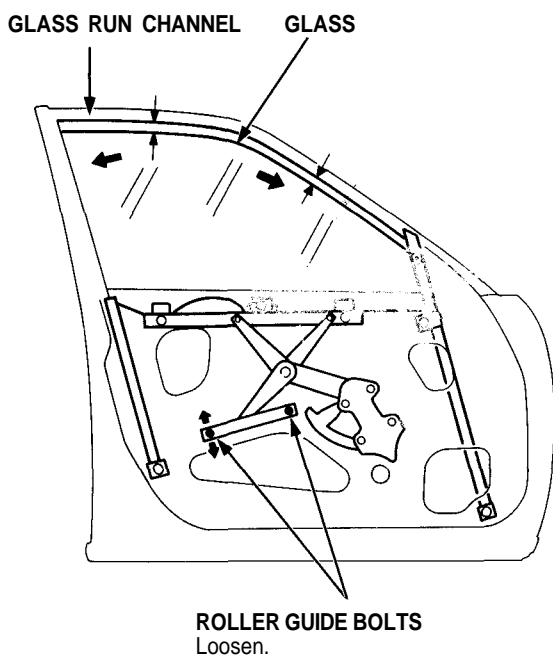


Rear:

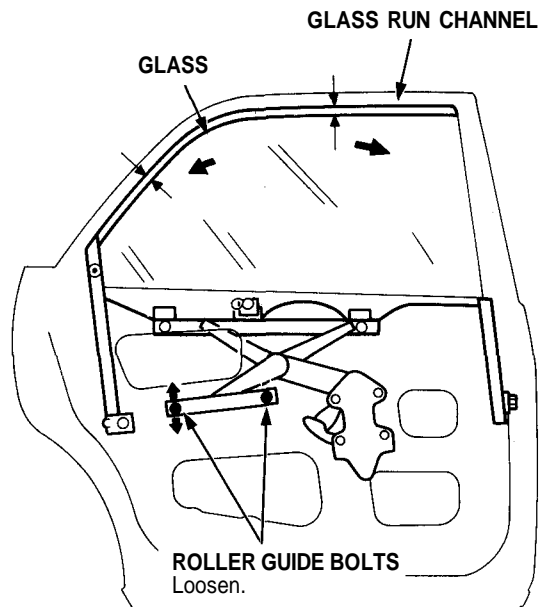

4. Raise the glass as far up as possible and hold it against the glass run channel.
Then tighten the roller guide bolts.
5. Make sure the glass goes up and down smoothly.
6. If necessary, adjust the front and rear channels.

Front:

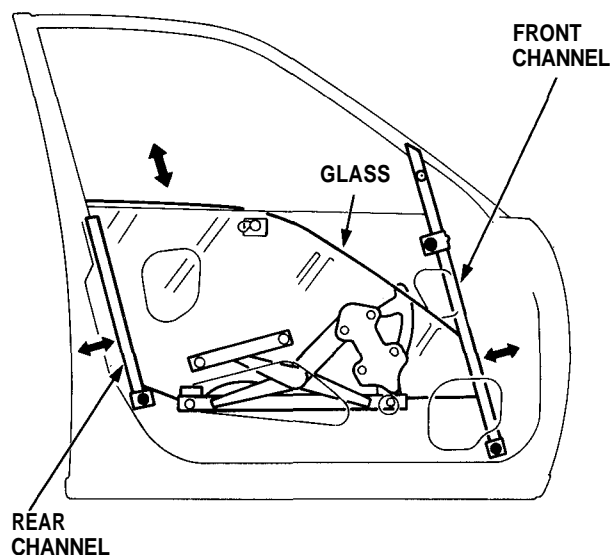


(cont'd)

Doors

Glass Adjustment (cont'd)



Rear:

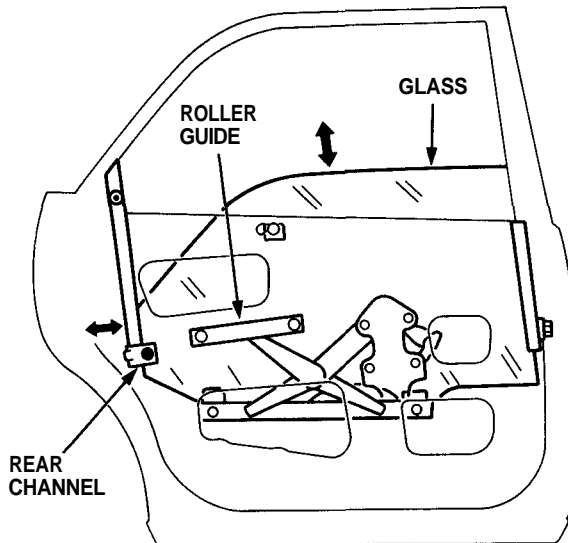

7. Raise the glass fully and check for gaps.
8. Check the glass operation.


NOTE:

- Check that the glass contacts the glass run channel evenly.
- Check that the stopper plate contacts the glass evenly.

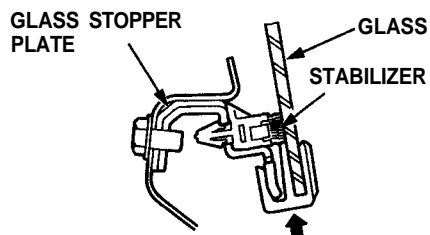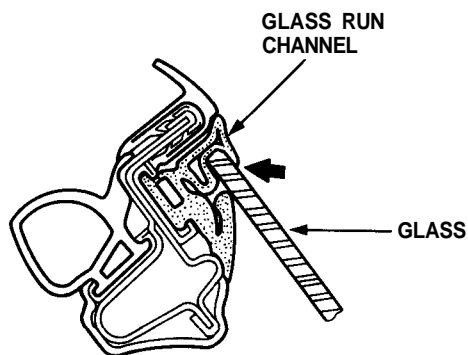

9. Check for water leaks.

NOTE: Do not use high pressure water.

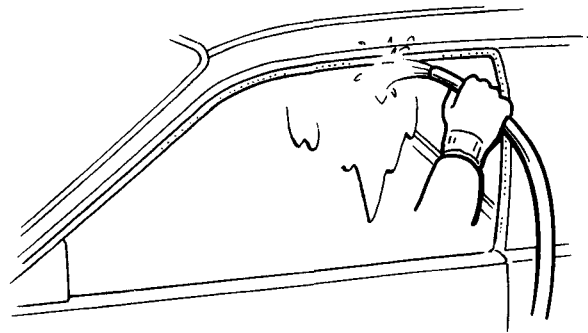

10. Route the door harnesses and connectors, then fasten them to the door (see pages 20-5, 14).
11. Attach the plastic cover and install the door panel (see pages 20-4, 5, 13, 14).