


Power Door Mirror

Replacement

1. Pry out the forward edge of the cover panel with a flat tip screwdriver, then remove the cover panel.
2. Remove the mounting screws while holding the door mirror. Disconnect the connector.

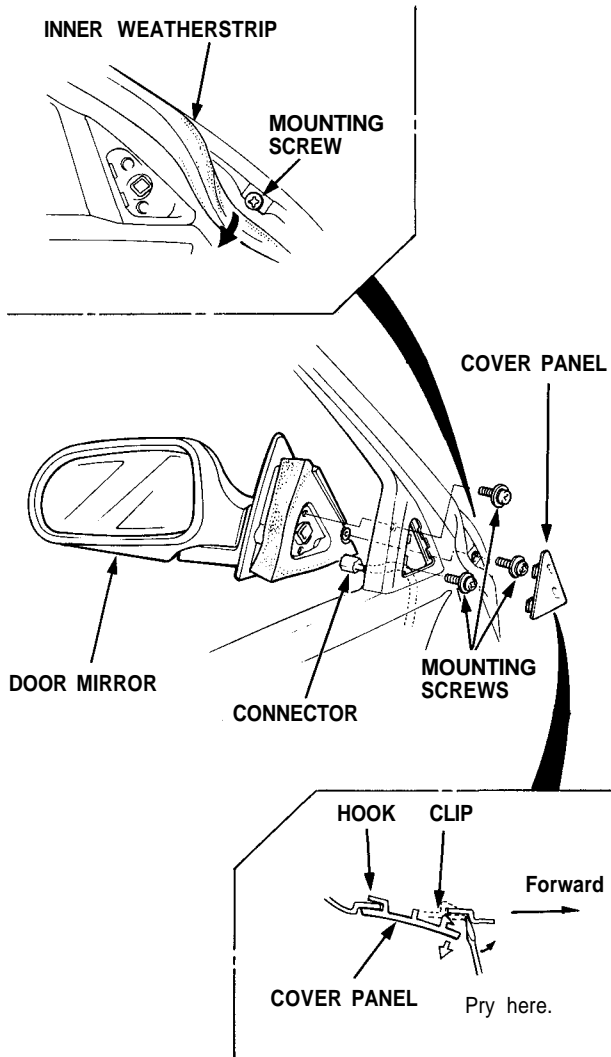


3. Installation is the reverse of the removal procedure.
4. Check for water leaks.


NOTE: Do not use high pressure water.

Mirror Holder Replacement

1. Insert a screwdriver in the mirror housing through the service hole, then loosen the actuator retaining screw.

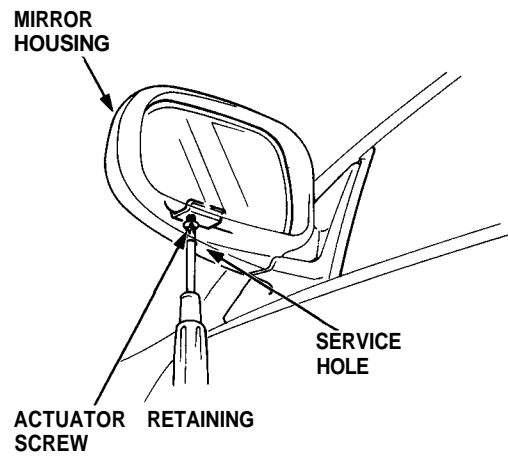

2. Pull the mirror holder out from the mirror housing. Disconnect the connectors.

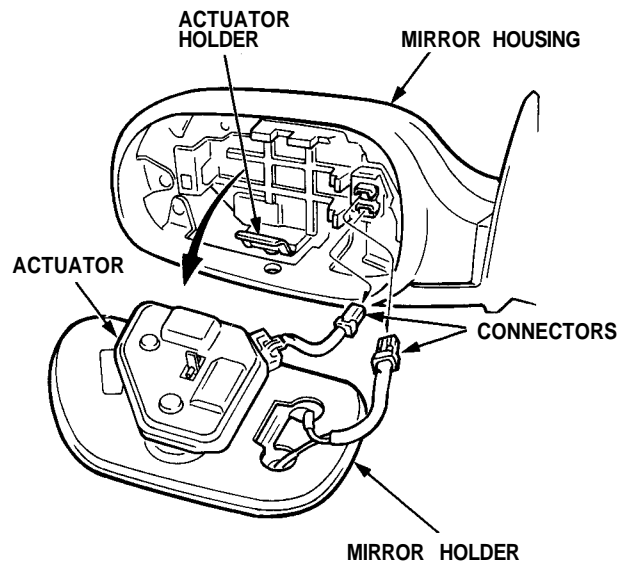

3. Installation is the reverse of the removal procedure.