

Headliner


Replacement

1. Remove:
 - Sunvisors, center visor and holders
 - Ceiling lights
 - Rearview mirror (see page 20-71)
 - Front pillar trim (see page 20-45)
 - Center pillar trim (see page 20-45)
 - Rear pillar trim (see page 20-45)

- Roof trim
- Grab handles
- Coat hanger
- Center armrest (see page 20-74)
- Front seat (see page 20-47)
- Rear seat (see page 20-66)

2. Remove the eight screws.

○: Rear clip locations, 4

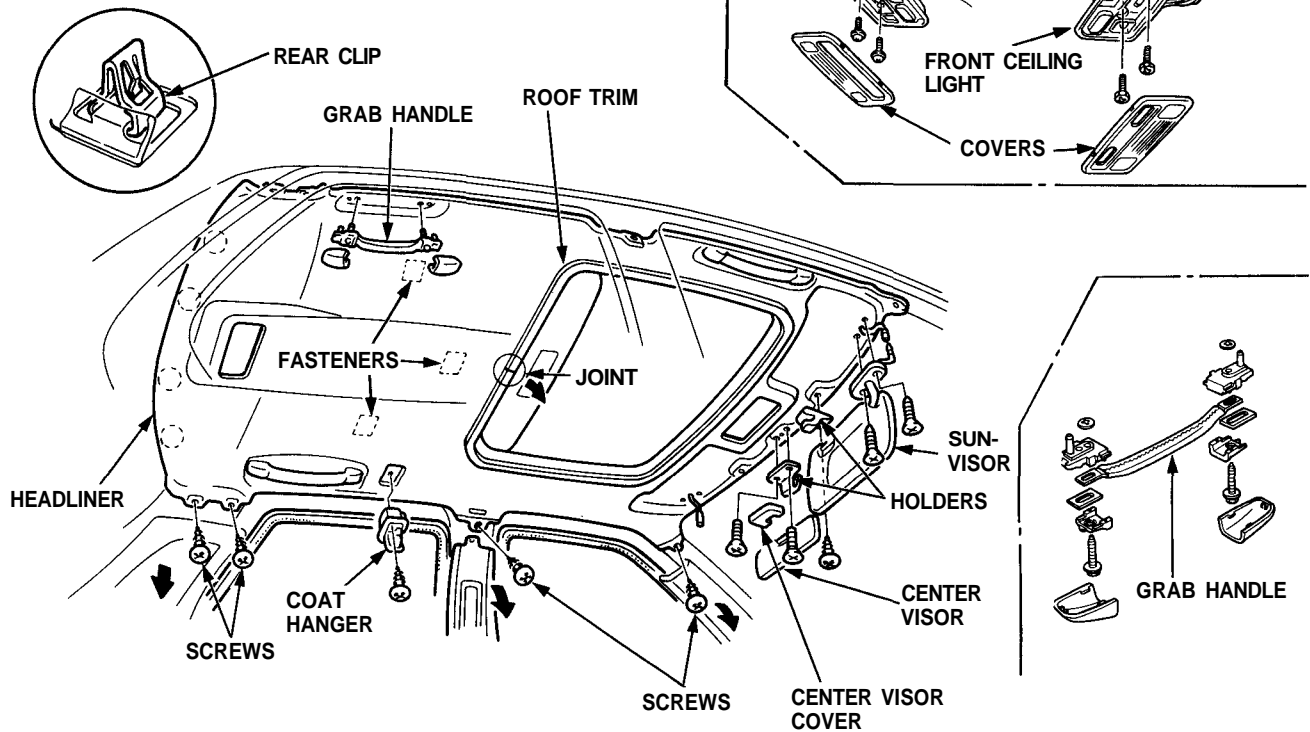

3. Remove the rear clips and fasteners, then remove the headliner.

4. Remove the headliner from the passenger's side door opening.

NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the dashboard and other interior trim.

5. Installation is the reverse of the removal procedure.

NOTE:

- When inserting the headliner through the door opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that both sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear.

