




Front Seat

Removal

NOTE: Take care not to scratch the seat covers and body.

1. Remove the front seat in the numbered sequence.

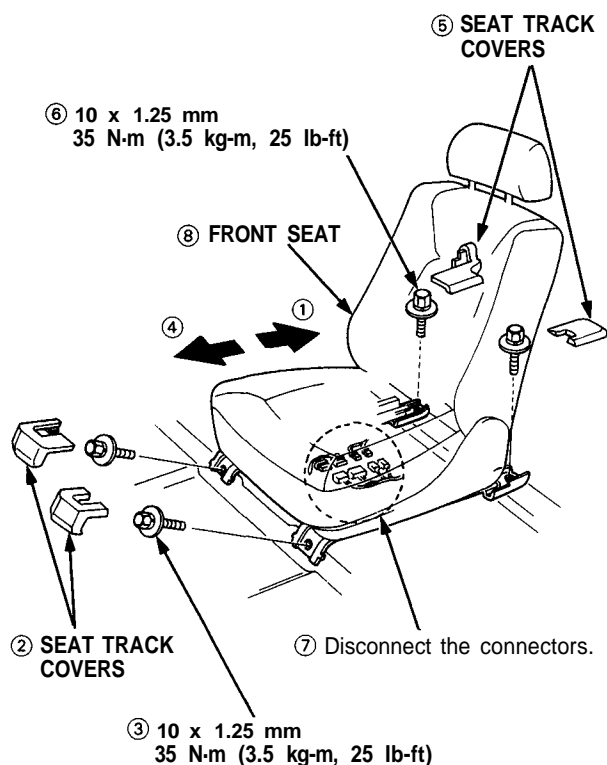

2. Installation is the reverse of the removal procedure.


NOTE: Make sure the connectors are connected properly.

Replacement


NOTE:

- Take care not to scratch the seat covers.
- Remove the front seat.

1. Remove the cushion front cover and recline cover.

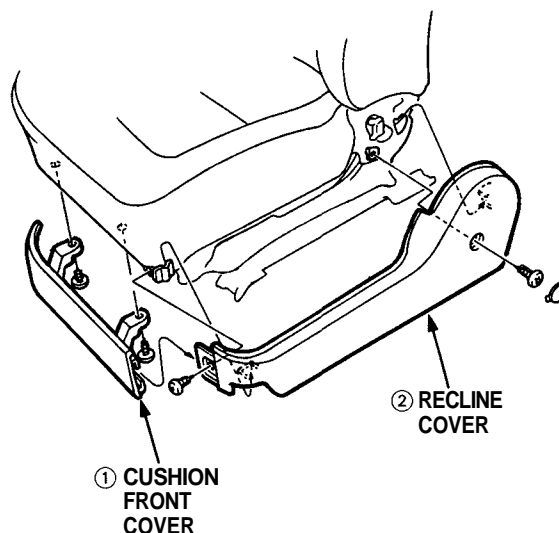

2. Pull off the switch knobs. Remove the trim panel by sliding it forward. Remove the clips as shown.

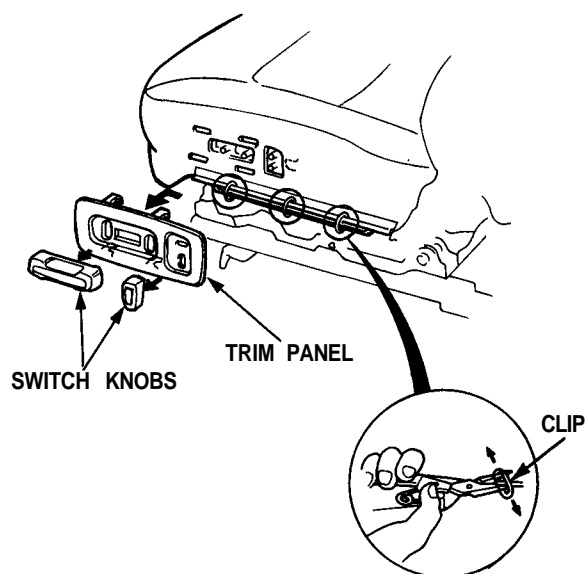


NOTE: The clip installation is described on page [20-51](#).

(cont'd)


Front Seat

Replacement (cont'd)

3. Remove the center cover and seat belt buckle (see page 20-67).

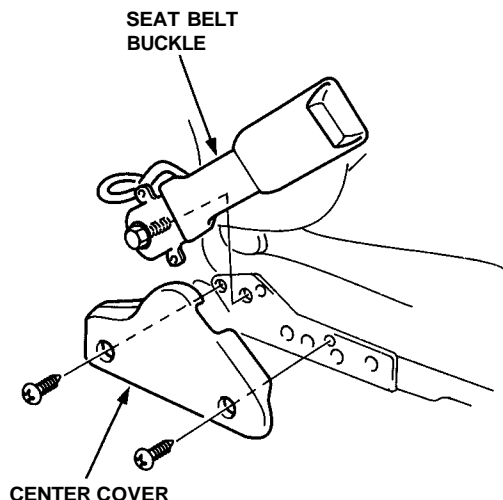


4. Detach the springs, then pull back the seat cover from under the front seat.

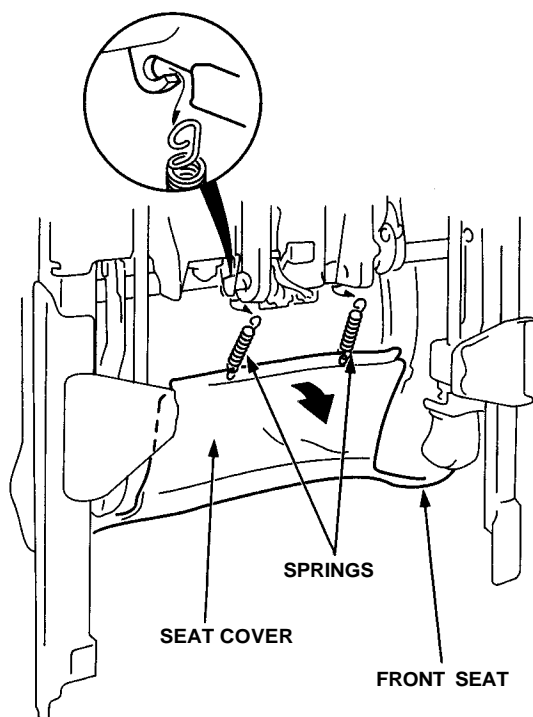


5. Detach the wire ties and clips, and disconnect the connectors.

- A: Clip locations
- B: Wire tie locations

Driver's (Fully power adjustable):


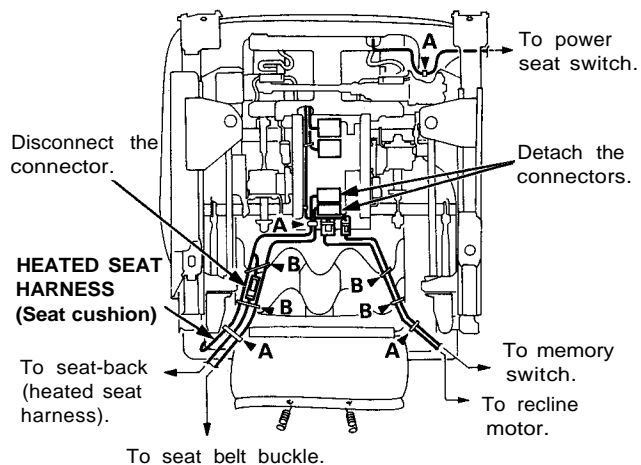


Passenger's (Power two-way adjustable):

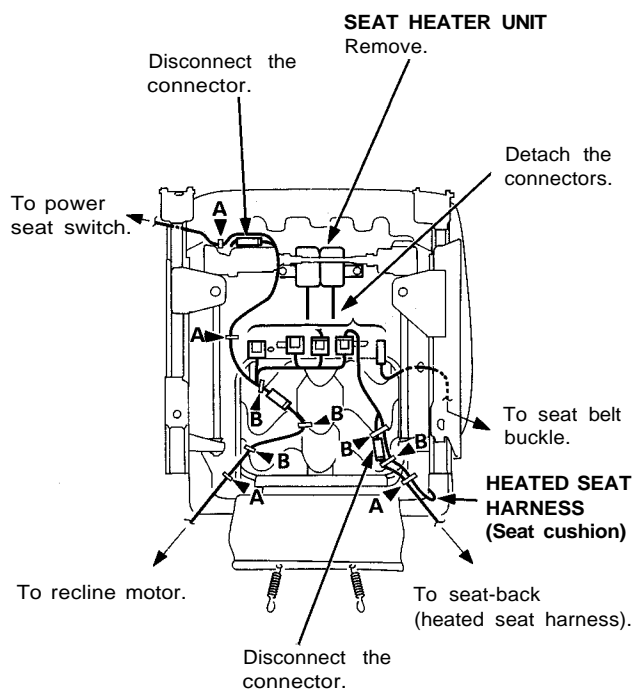




6. Remove the seat cushion as shown.

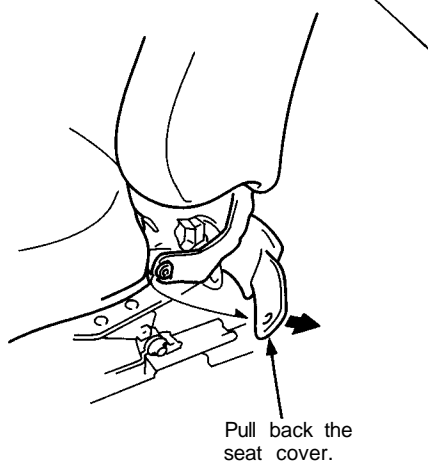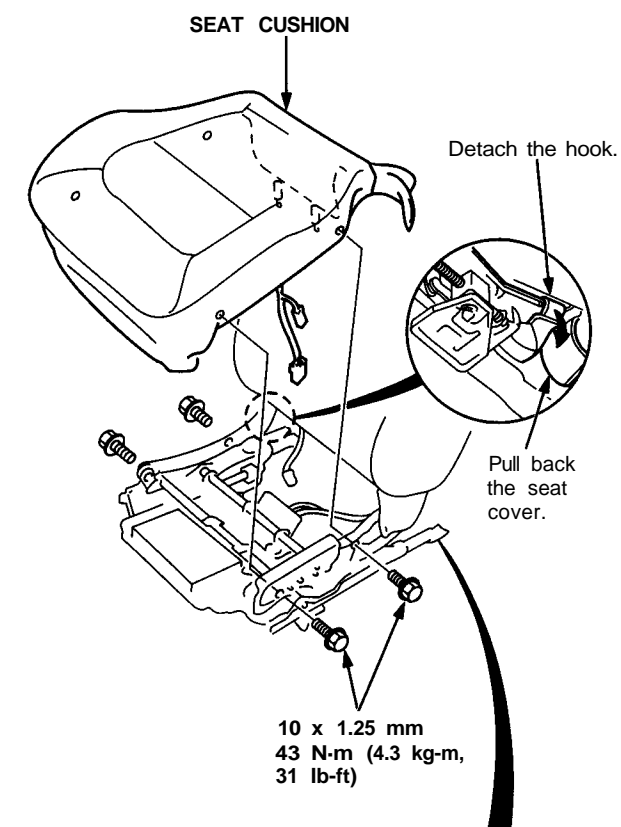

7. Remove the back cover, then remove the seat-back as shown.

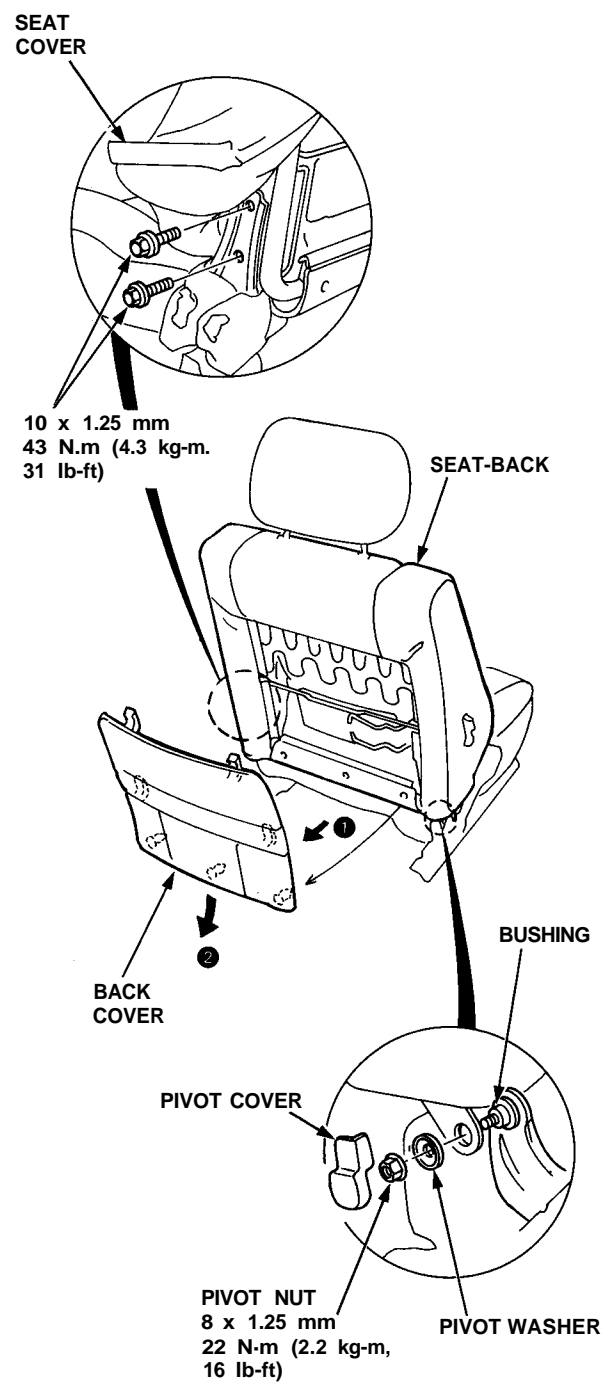


(cont'd)

Front Seat

Replacement (cont'd)

8. Remove the recline adjuster cover.

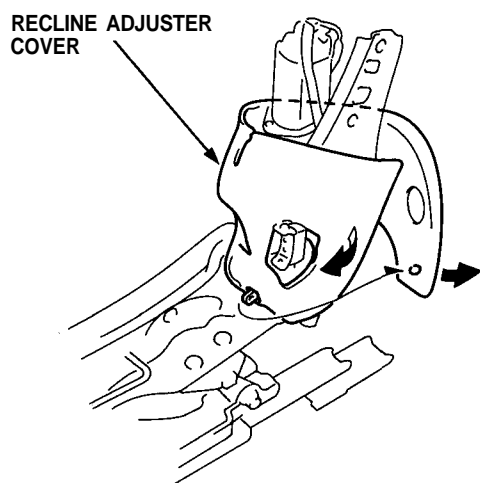

9. Installation is the reverse of the removal procedure.

NOTE: Make sure the connectors are connected properly.