

Front Seat Linkage

Recline Adjuster, Slide/Up-down Adjuster Replacement


 
CAUTION: Wear gloves to remove and install the recline adjuster and slide/up-down adjuster.

NOTE:

- Take care not to scratch the seat covers.
- To separate the recline adjuster and slide/up-down adjuster, elevate the seat cushion at the front and rear.
- Remove the front seat (see page 20-47).
- Remove the seat cushion and seat-back (see page 20-47).



1. Remove the power seat switch.

►: Screw locations, 2

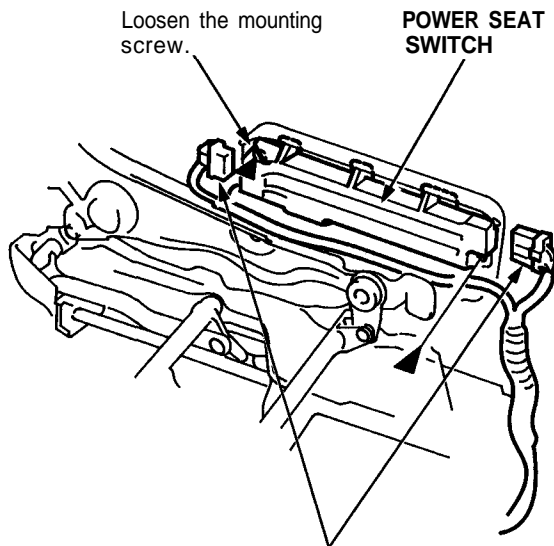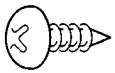


Disconnect the connectors.

2. Separate the recline adjuster and slide/up-down adjuster.

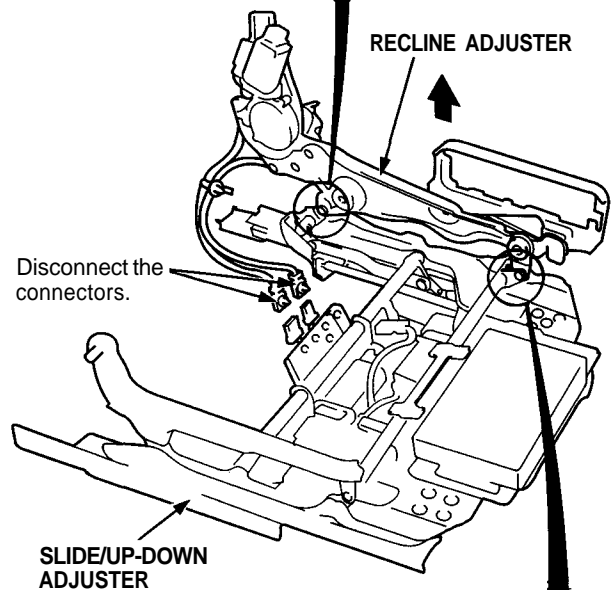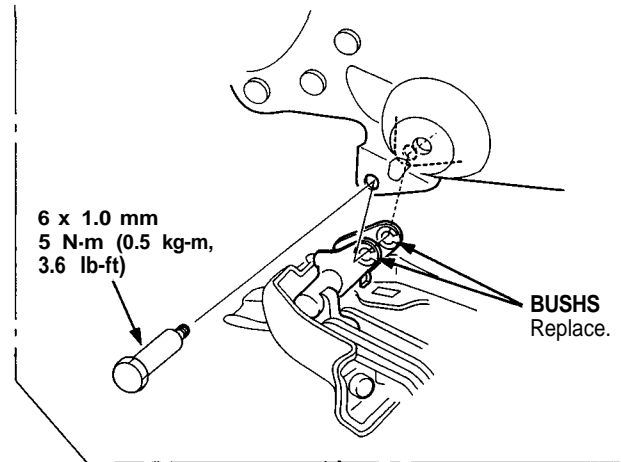

BUSH Replace.

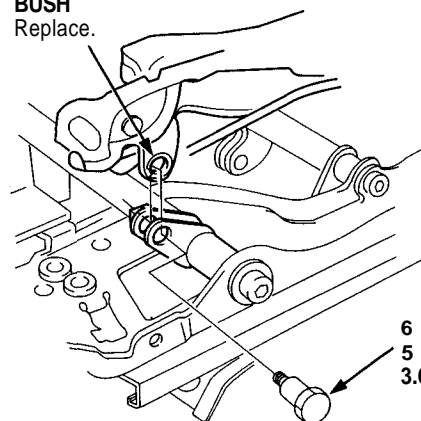




3. Remove the slide joint cable (see page 20-65).
4. Remove the seat memory control unit and harness protector from the slide/up-down adjuster. Disconnect the connectors.




▷: Clip locations, 2

— 1)


— 2) Detach the clip by pulling it.

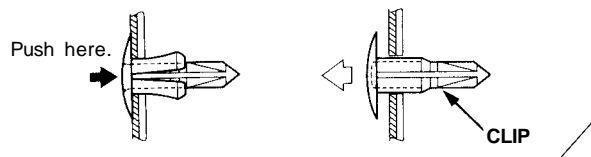

▶: Bolt locations, 4

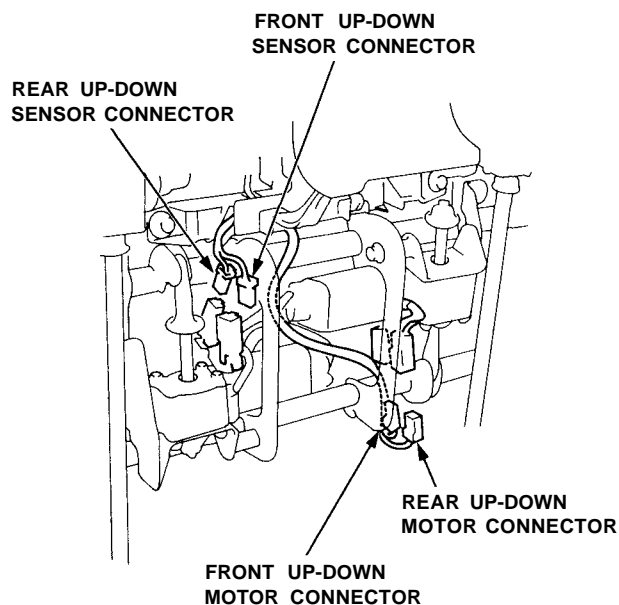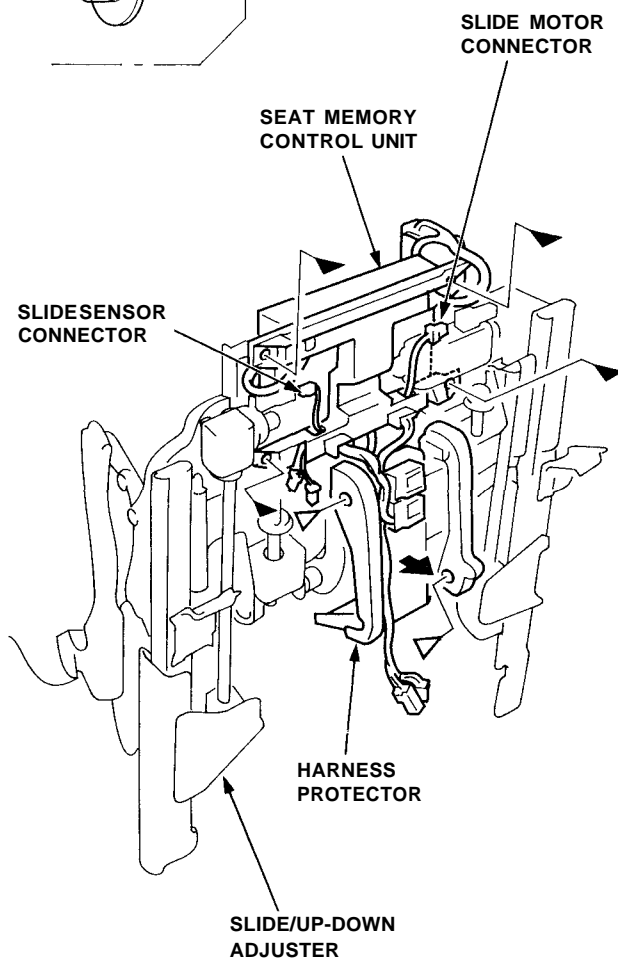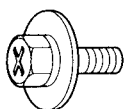 

5. Remove the lower caps on both sides.

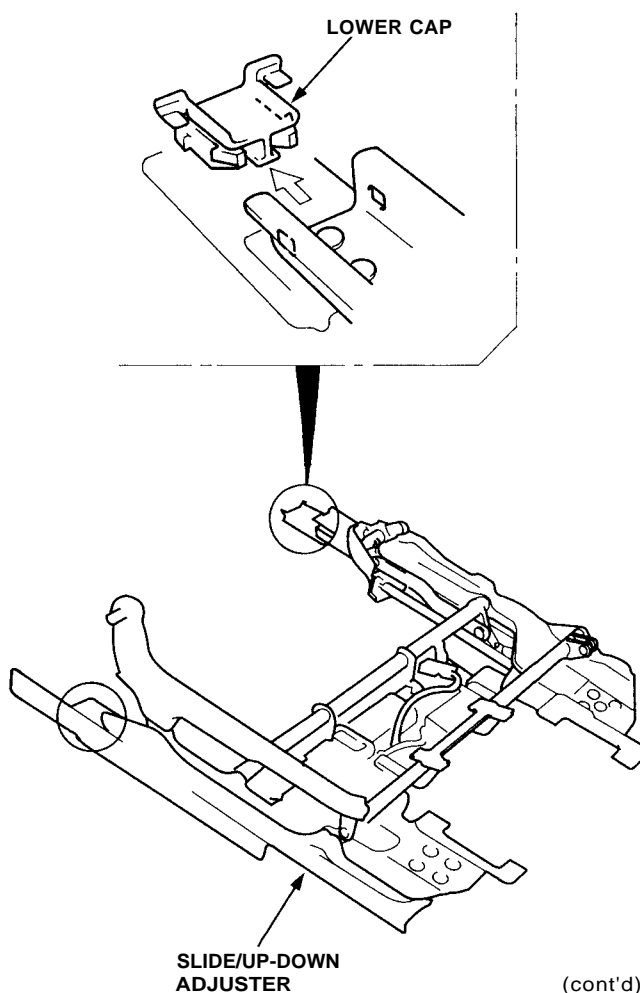

(cont'd)

Front Seat Linkage


Recline Adjuster, Slide/Up-down Adjuster Replacement (cont'd)

6. Installation is the reverse of the removal procedure.


NOTE:

- Replace the bushs with new ones as follows


— 1) Install the bush.

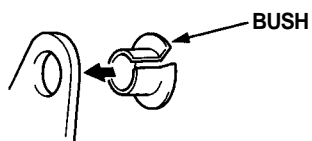

--2) Hold the bush down against a metal plate, then flare the edge of the bush using a center punch as shown.


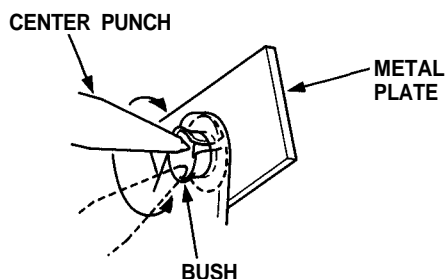


— 3) Flatten the bush using a flat tip screwdriver as shown.

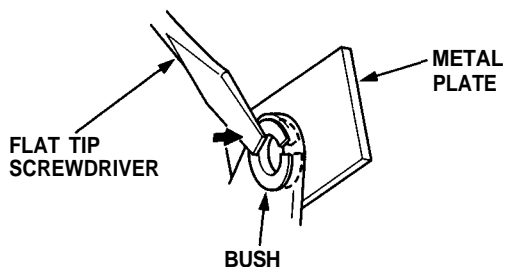

- Make sure the slide joint cable is connected securely (see page 20-65).

- Make sure the connectors are connected properly.

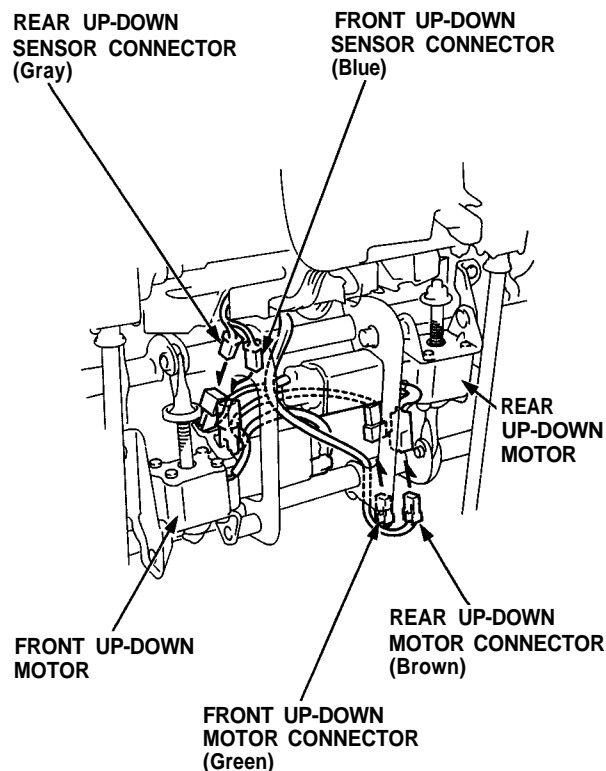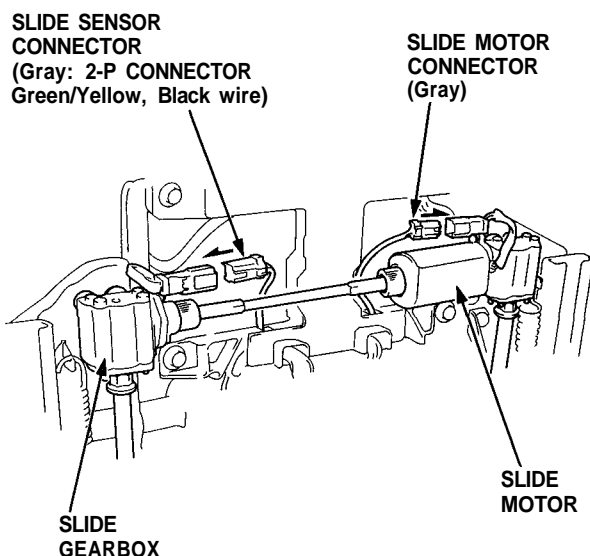

- Check the recline adjuster and slide/up-down adjuster operations.