



Recline Motor Replacement


CAUTION: Wear gloves to remove and install the recline motor.

NOTE:

- Take care not to scratch the seat cover.
- Remove the front seat (see page 20-47).
- Remove the seat cushion and seat-back (see page 20-47).

1. Remove the switch plate (fully power adjustable only) and recline motor from the recline adjuster.

►: Nut locations, 3

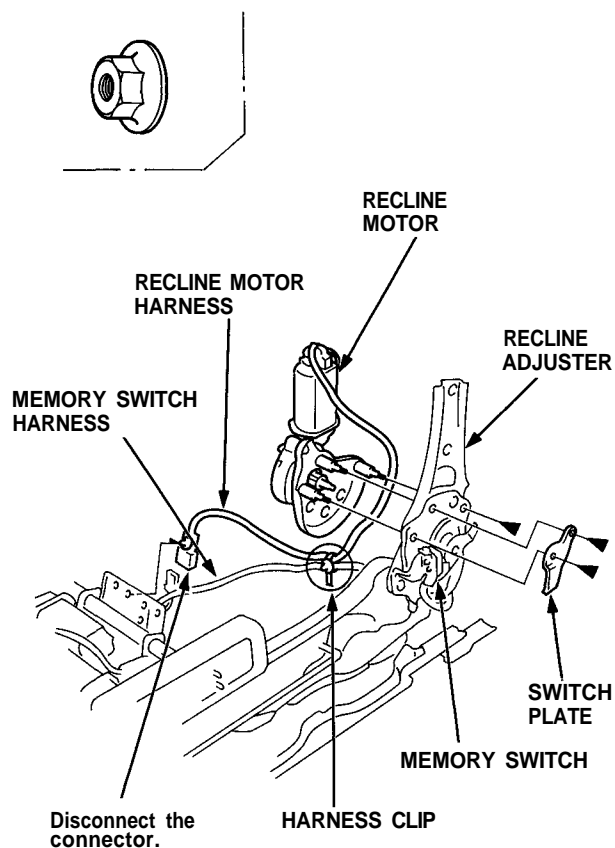


NOTE: When removing the switch plate (fully power adjustable only), take care not to damage the memory switch.

2. Installation is the reverse of the removal procedure.


NOTE:

- Before installing the recline motor, apply grease (molybdenum grease) to the gear portion.

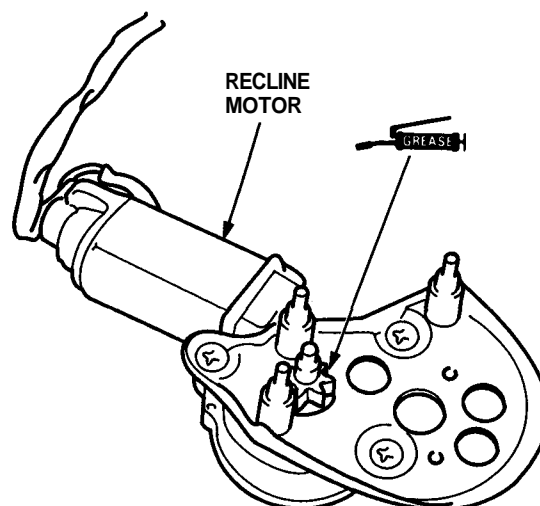

- After installing the recline motor, apply liquid thread lock to (A) locations, then tighten the nuts.

►: Nut locations, 3
5 x 0.8 mm
3 N·m (0.3 kg-m, 2.2 lb-ft)

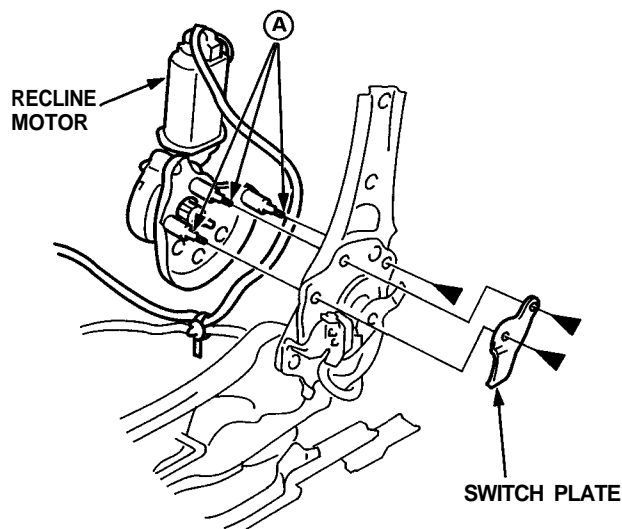

- Make sure the connector is connected properly.
- Check the recline adjuster operation.