




Rear Seat Belt Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (see page 20-66).
2. Remove the rear pillar trim panel (see page 20-45).
3. Remove all anchor bolts, the retractor bolt and retractor mounting bolt, then remove the seat belts.

NOTE: When removing the anchor bolts and retractor bolt, use a 17 mm socket or box-end wrench.

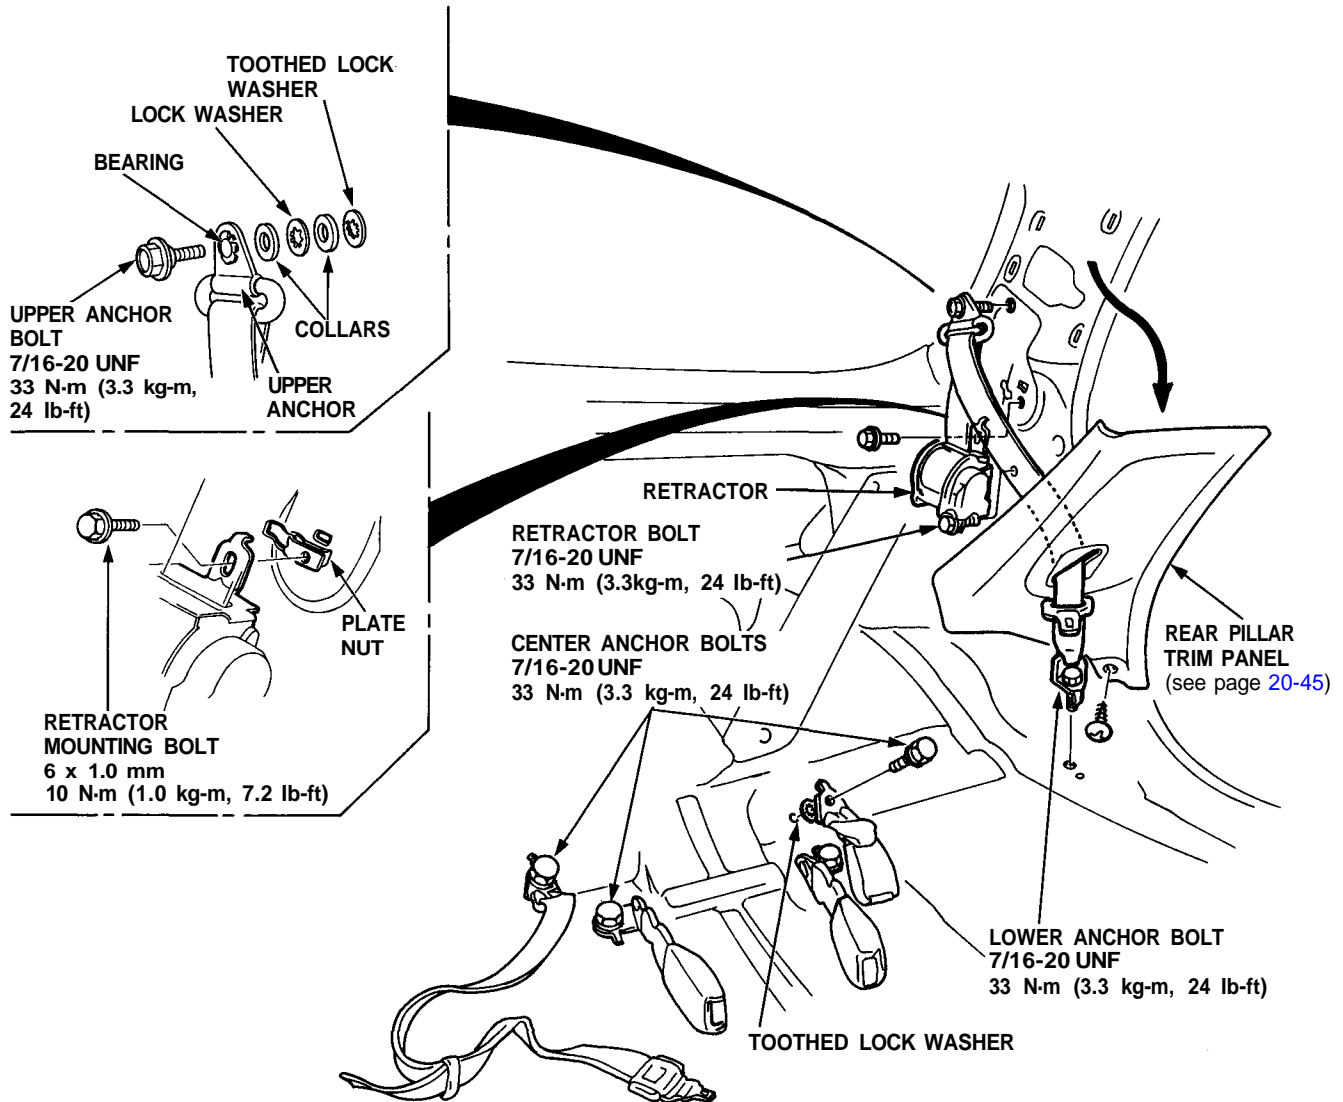

4. Check that the retractor locking mechanism functions as described on page 20-70.

NOTE: When storage of the seat belts is necessary, store them in a place free from water, oil, grease, heat and direct sunlight.

5. Installation is the reverse of the removal procedure.

NOTE: Before reinstalling the rear pillar trim panel and rear seat, make sure there are no twists or kinks in the seat belt.