

Dashboard

Component Removal/Installation


SRS wire harnesses are routed near the steering column and passenger's side dashboard.

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

NOTE: Take care not to scratch the dashboard and steering column.


CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

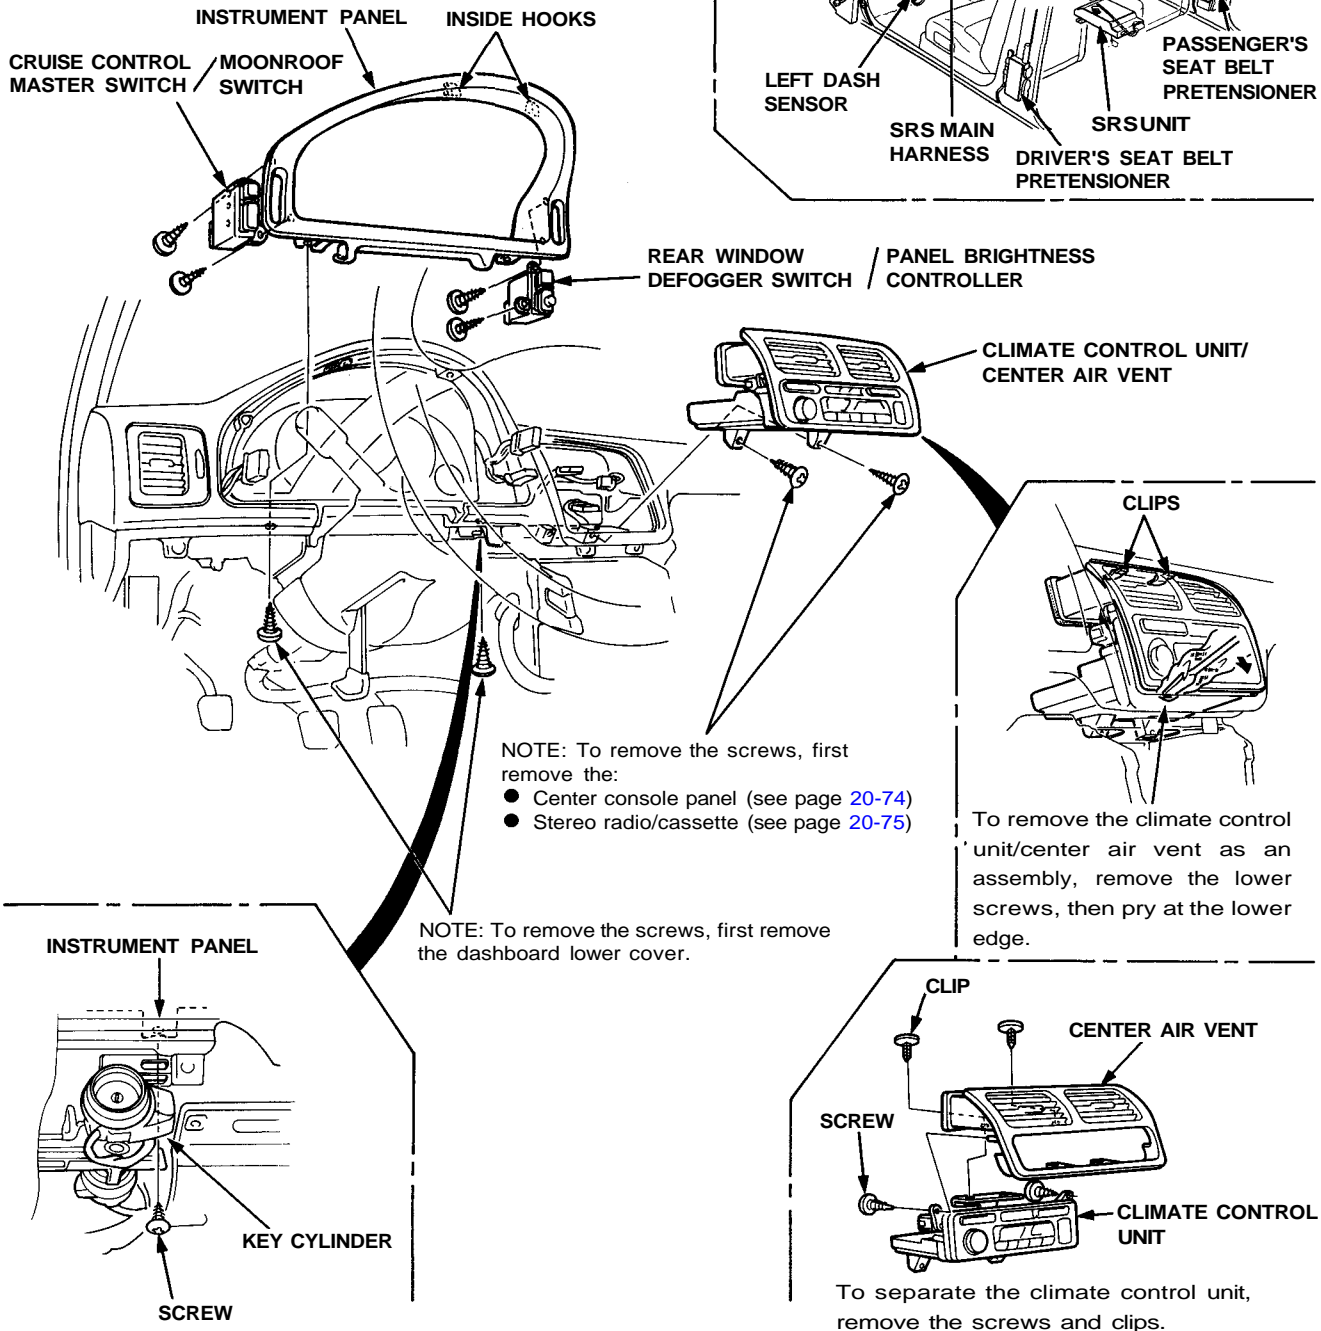



Disassemble in the numbered sequence.

Passenger's:

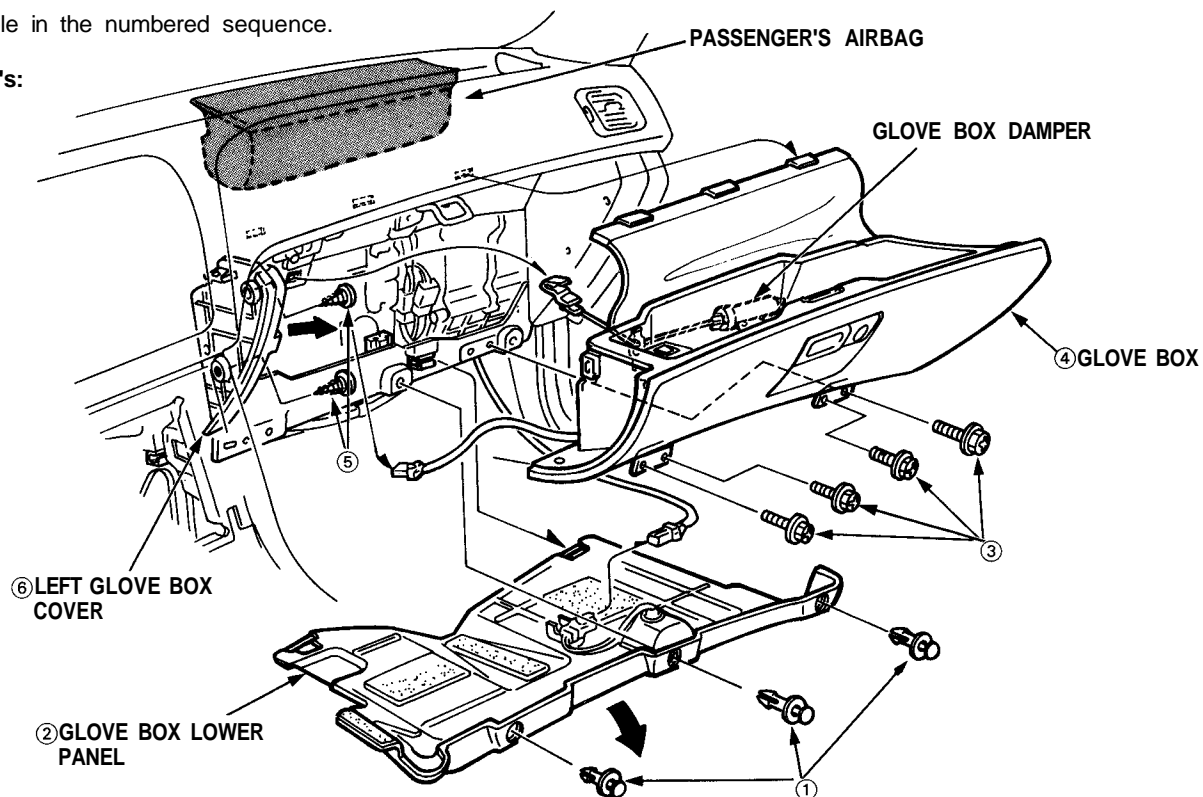

Driver's:

Installation is the reverse of the removal procedure.

NOTE: Take care not to scratch the dashboard, center console and steering column.

