



Bumpers


Front Bumper Replacement

CAUTION: Wear gloves to remove and install the front bumper.

1. Remove the covers, then remove the right and left front turn signal lights.
2. Remove the two bumper mounting bolts on each side.
3. Remove the four lower skirt mounting bolts.
4. Lift and remove the bumper by sliding it forward.

NOTE:


- An assistant is helpful when removing the bumper.
- Take care not to scratch the bumper.

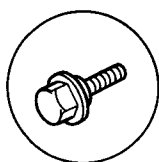

○: Lower skirt mounting bolt locations, 4

8 x 1.25 mm
22 N·m
(2.2 kg-m,
16 lb-ft)

BUMPER
STAY

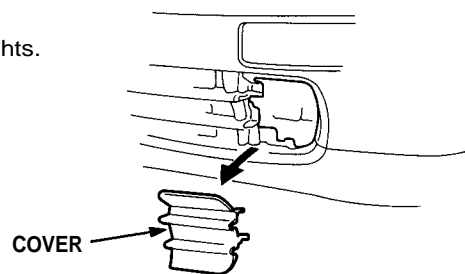

COVER

CONNECTOR


SCREW

②

①

FRONT TURN
SIGNAL LIGHT

Loosen the screw, then pull the front turn signal light out and disconnect the connector.

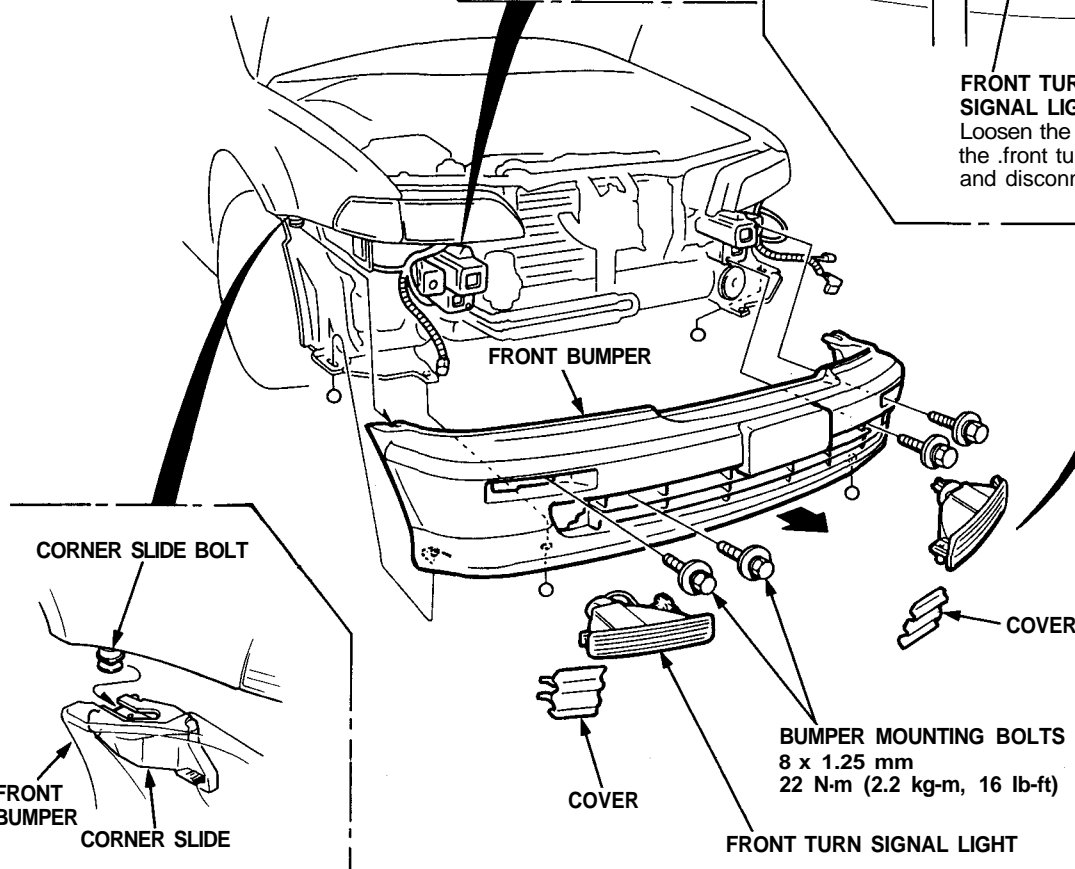

CORNER SLIDE BOLT

FRONT
BUMPER

CORNER SLIDE

BUMPER MOUNTING BOLTS
8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

COVER

FRONT TURN SIGNAL LIGHT

COVER

5. Installation is the reverse of the removal procedure.

NOTE: To install, insert the corner slide bolts into the corner slides.