

Hood

Replacement/Adjustment

NOTE: An assistant is helpful when removing the hood.




1. Disconnect the washer hose, then pull it out of the hood.
2. Hold the hood up and remove the support strut mounting bolts on each side.
3. Remove the hood by removing the hood mounting bolts on each side.
4. To remove the hood hinges, remove the lower molding (see page 20-27).

ALIGNMENT:

- The hood hinges can be adjusted right and left as well as fore and aft by using the elongated holes.

NOTE:

- When scrapping the support strut, dispose it as described in Support Strut Disposal (see page 20-85).
- Before pulling out the opener cable, tie a string to the opener cable so you can pull it back in later.
- Take care not to bend the opener cable.

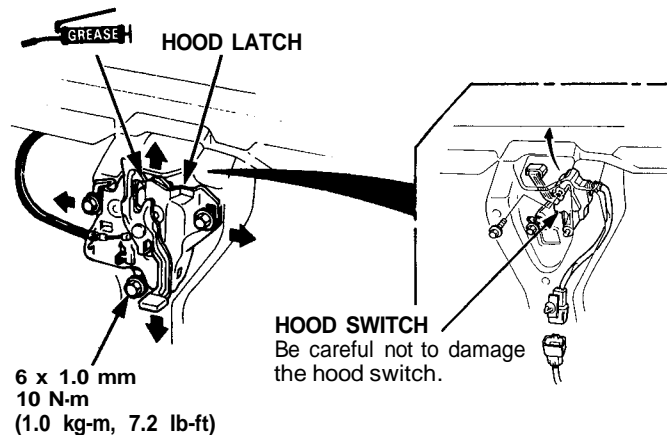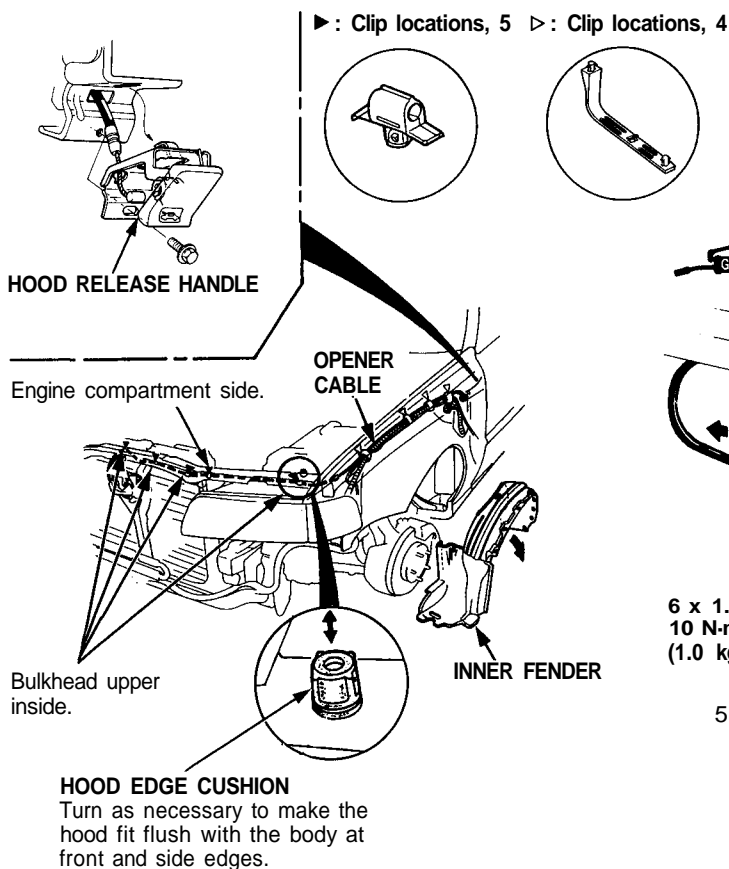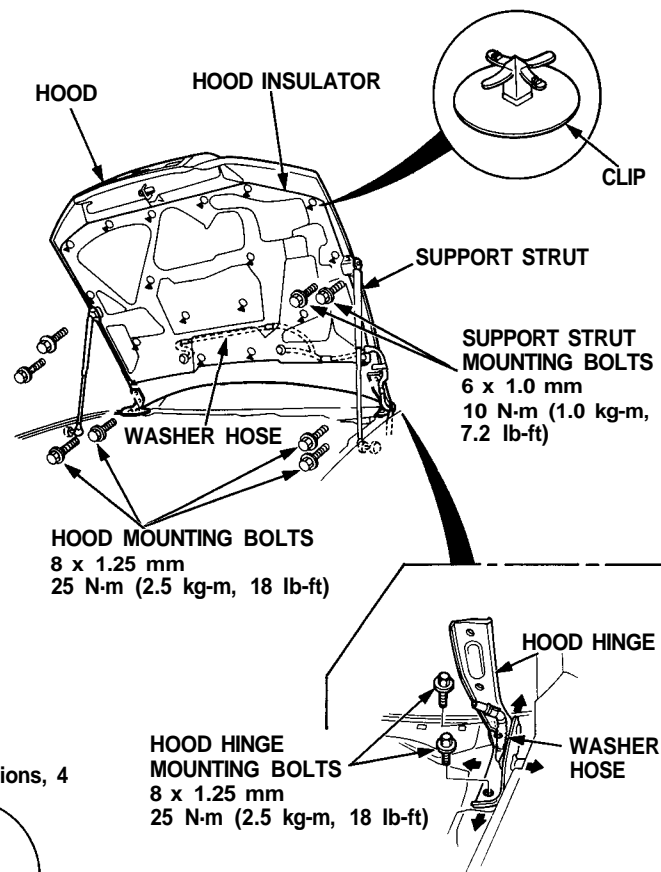

5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cable is routed and connected properly.
- Align the hood with the body.