




## Support Strut Disposal

**⚠ WARNING** The support strut contains nitrogen gas and oil under pressure.

The pressure must be relieved before disposal to prevent explosion and possible injury when scrapping.

Place the support strut on a level surface with its rod extended and drill a hole of 2–3 mm (3/32") diameter in the body to release the gas.

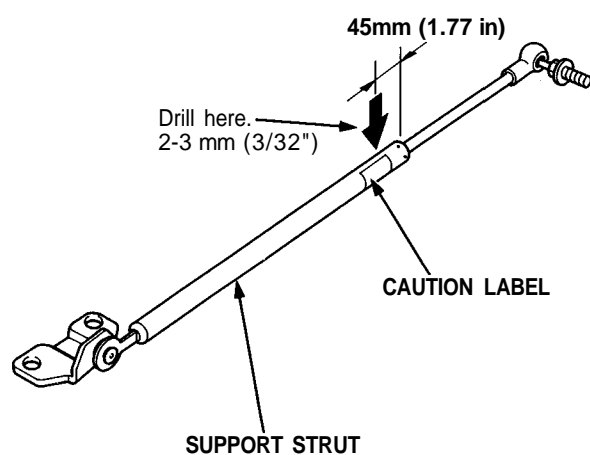

**⚠ WARNING** Always wear eye protection to avoid getting metal shavings in your eyes when relieving the gas pressure.