




Trunk Lid Latch/Fuel Lid Opener/Latch/Opener Cable





Trunk Lid Latch Replacement

NOTE:

- To remove the trunk lid latch, first remove the trunk lid inner trim panel.
- After installing, align the trunk lid with the striker.

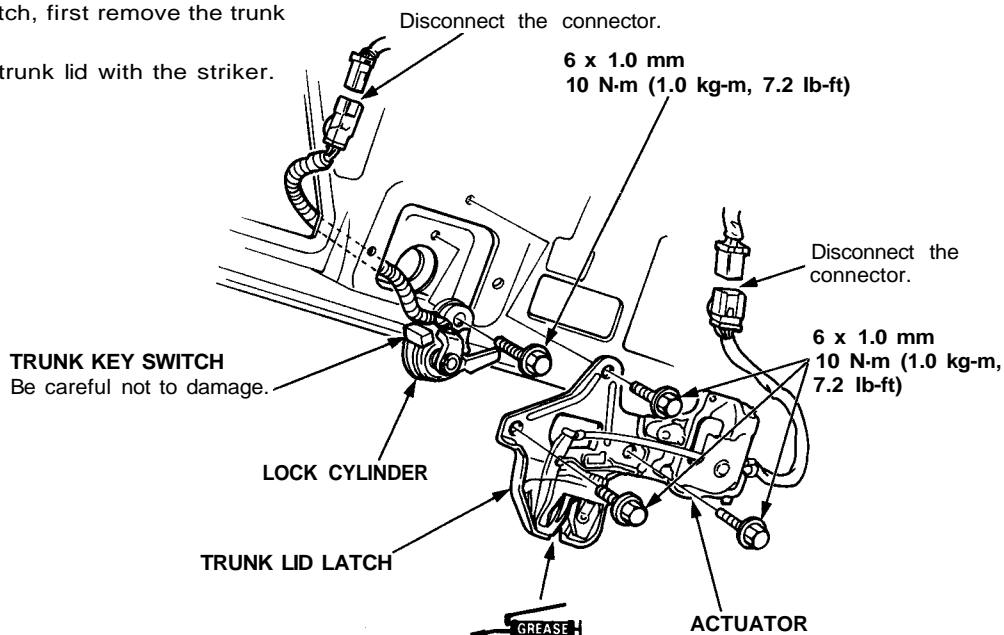

Fuel Lid Opener/Latch/Opener Cable Replacement

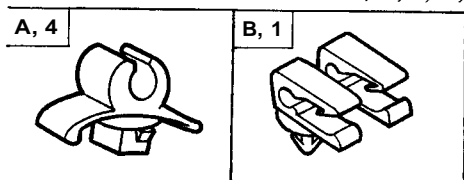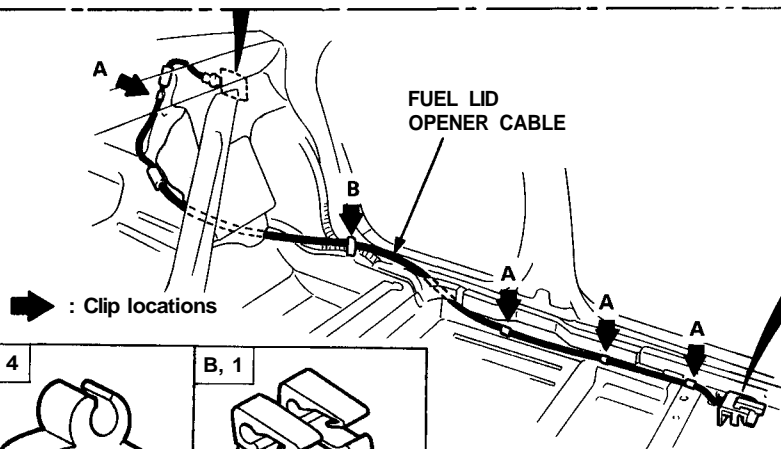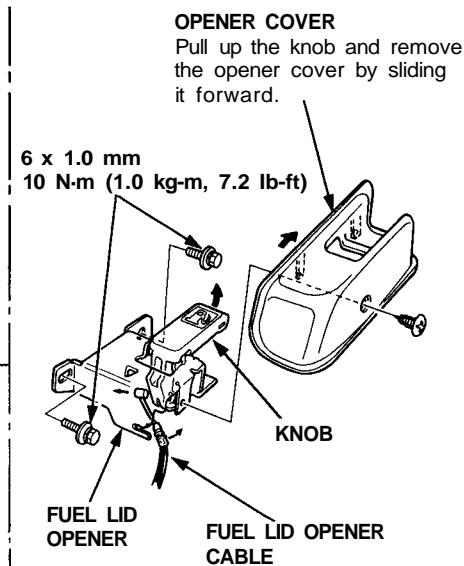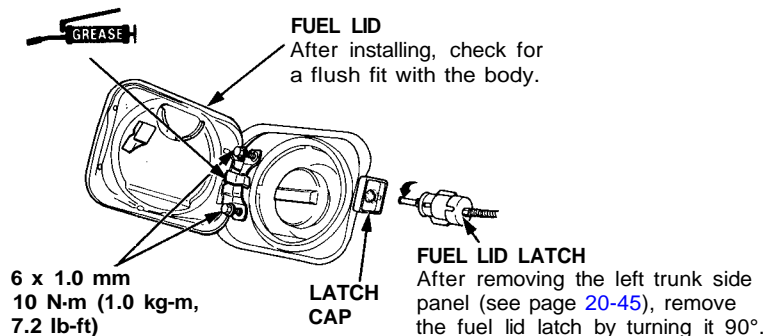

Installation is the reverse of the removal procedure.

NOTE:

- Take care not to bend the fuel lid opener cable.
- Make sure the fuel lid opener cable is routed and connected properly.