



Roof Molding/Side Window Moldings

Replacement


CAUTION:

- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.
- Wear gloves to remove and install the side window moldings.


NOTE: Take care not to scratch or bend the roof and side window moldings and body.

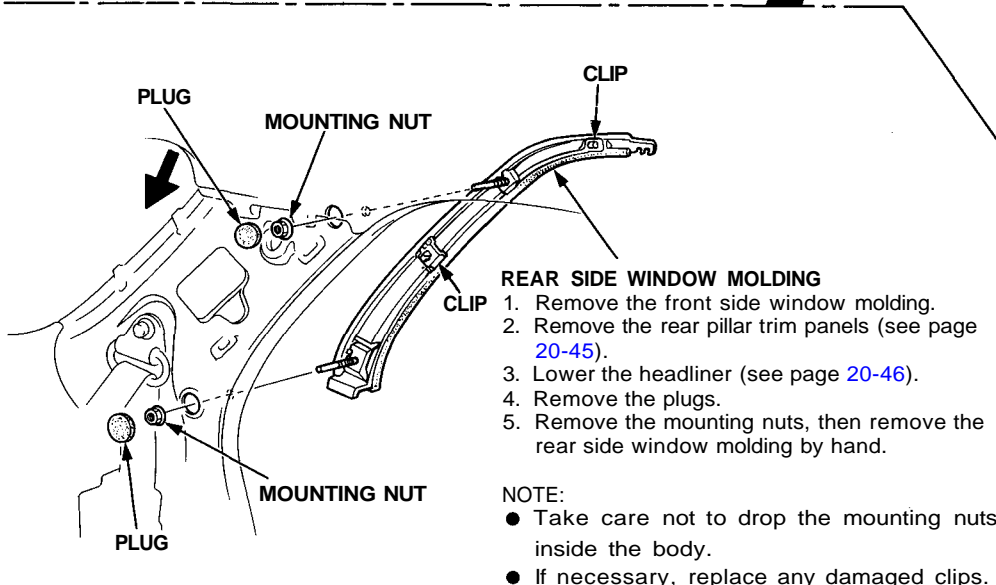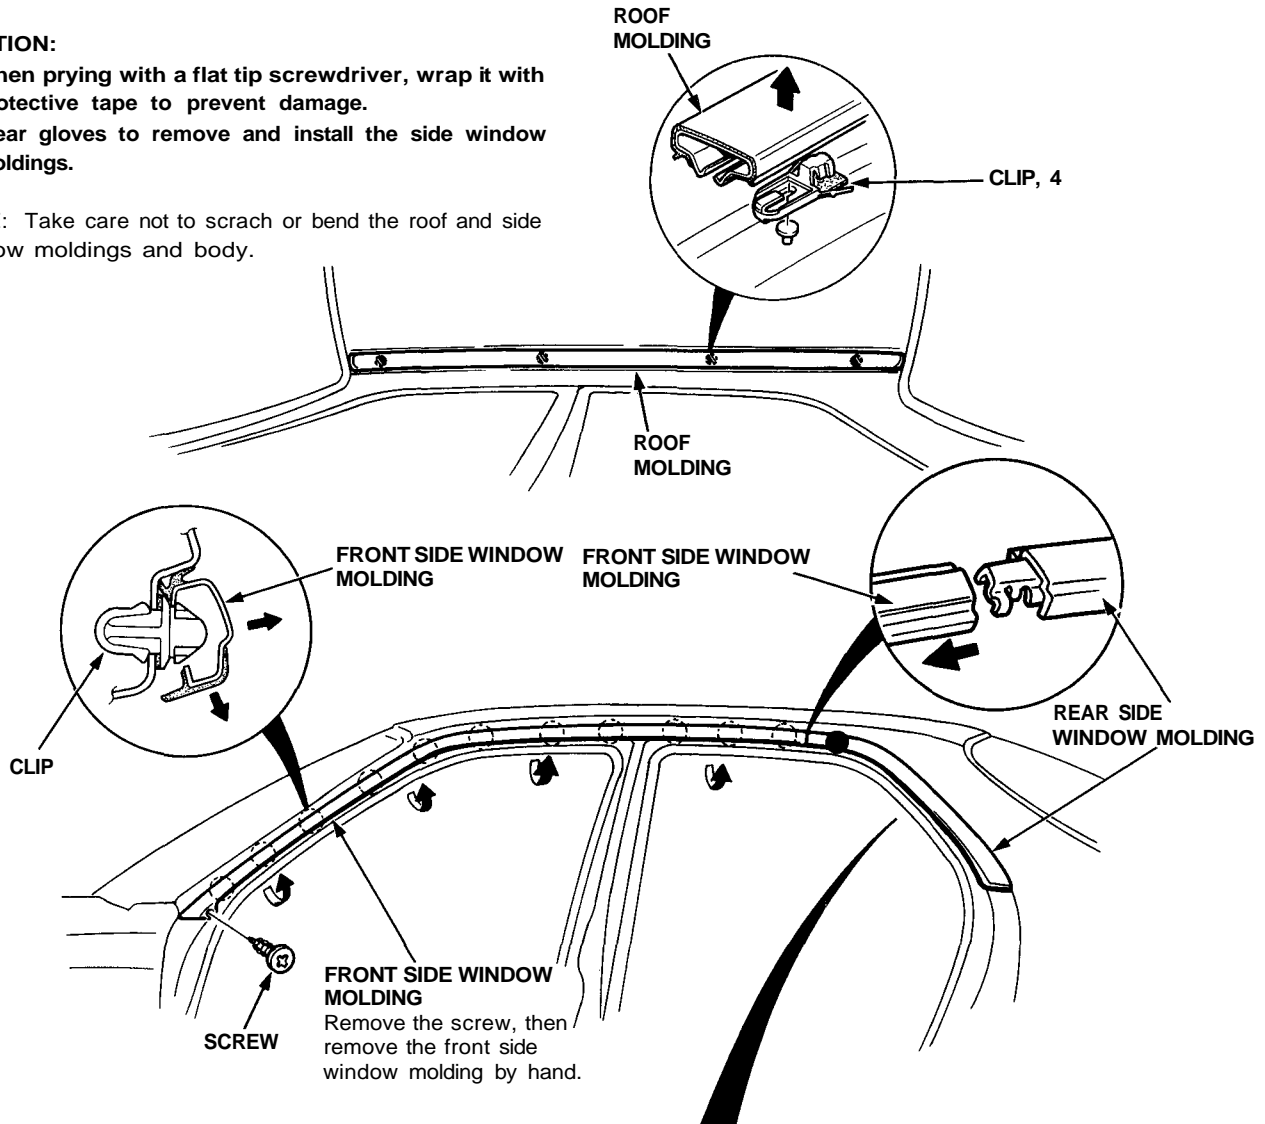

○: Front side window molding clip locations, 11

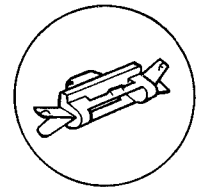

●: Rear side window molding clip location, 1

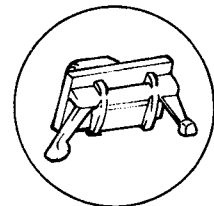

REAR SIDE WINDOW MOLDING

1. Remove the front side window molding.
2. Remove the rear pillar trim panels (see page 20-45).
3. Lower the headliner (see page 20-46).
4. Remove the plugs.
5. Remove the mounting nuts, then remove the rear side window molding by hand.

NOTE:

- Take care not to drop the mounting nuts inside the body.
- If necessary, replace any damaged clips.