





4. Remove the glove box frame mounting bolts, then remove the glove box frame.

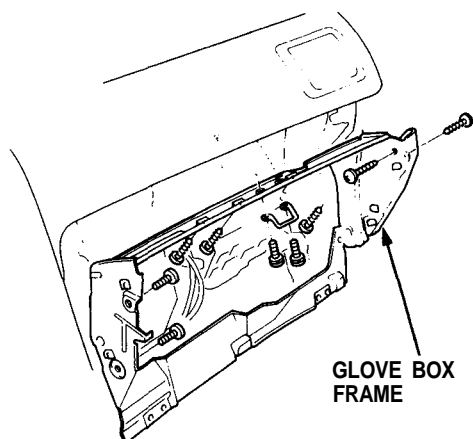

5. Disconnect the connectors as shown.

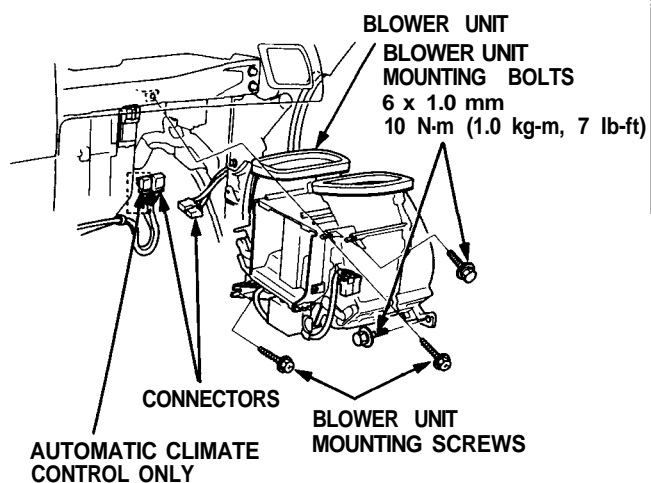

6. Remove the blower unit mounting bolts and screws, then remove the blower unit.
7. Install the blower unit in the reverse order of removal, then make sure it runs and doesn't leak any air.

Overhaul

