



## Overhaul

1. Remove the heater core mounting bracket, remove the clamps from the inlet and outlet lines, then lift out the heater core.
2. Remove the upper half of the evaporator housing, then remove the evaporator core.
3. Remove the expansion valve if necessary.
4. Assemble the heater-evaporator unit in the reverse order of disassembly. Hold the expansion valve capillary tube down against the suction line, and wrap it with tape to hold it there.

