



Belt Adjustment

1. Loosen the idler pulley center nut and adjusting bolt.
2. Adjust the A/C compressor belt tension by turning the adjusting bolt.
3. Tighten the idler pulley center nut, then tighten the adjusting bolt securely.
 - "New belt" refers to a belt which has been used less than five minutes on a running engine.
 - "Used belt" refers to a belt which has been used on a running engine for five minutes or more.

NOTE: Check for belt damage. If necessary, replace the A/C compressor belt.

Belt movement under a force of 100 N (10 kg, 22 lbs)	
New belt	Used belt
0.20-0.26 in (5.0-6.5 mm)	0.31-0.39 in (8.0-10.0 mm)

Measure with belt tension gauge	
New belt	Used belt
800-1000 N (80-100 kg, 176-220 lbs)	400-600 N (40-60 kg, 88-132 lbs)

