

# Troubleshooting

## Flowchart — Both Fans Low Speed

Both fans do not run at low speed.

Disconnect the 12P connector from the fan control unit.

Turn the ignition switch ON.

Using a jumper wire, connect the BLU/YEL wire terminal to body ground.

Do the both fans run at low speed?

YES — To page 22-57

NO

Disconnect the 8P connector from the radiator fan control module.



Check for continuity in the BLU/YEL wire between the radiator fan control module and the fan control unit.

Is there continuity?

NO — Repair open in the BLU/YEL wire between the radiator fan control module and the fan control unit.

YES

Substitute a known-good radiator fan control module and retest. If the symptom/indication goes away, replace the original radiator fan control module.

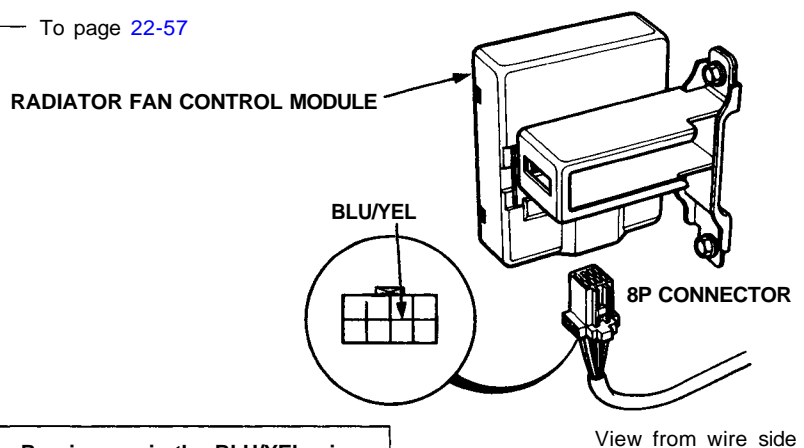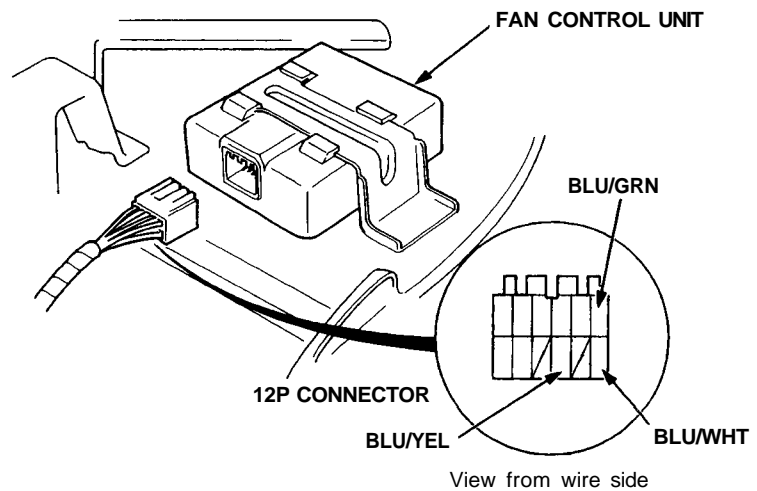



From page 22-56

