


Sunlight Sensor



Removal

With a small screwdriver, carefully pry the sunlight sensor out of the dashboard and disconnect its connector.

NOTE: Protect the dashboard; cover it with a shop towel before you pry against it.

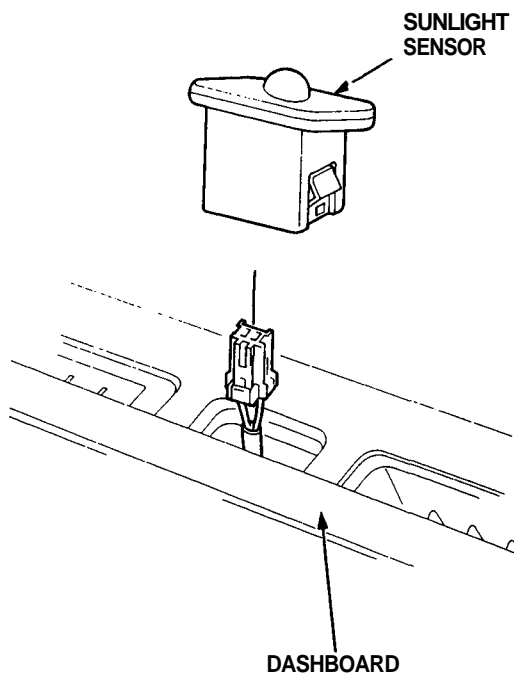

Test

Measure the voltage between the terminals with the sensor out of direct sunlight.

- The voltage should be 1.4 ± 0.2 V.

