



Ignition Switch

Test

1. Remove the dashboard lower cover (see page [23-81](#)).
2. Disconnect the 7-P connector from the under-dash fuse/relay box.
3. Check for continuity between the terminals in each switch position according to the table.

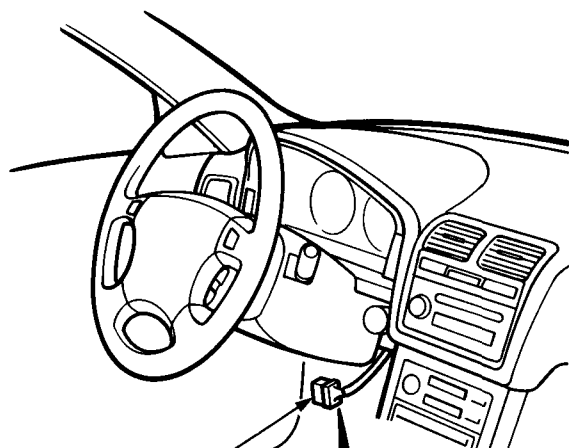

7-P CONNECTOR

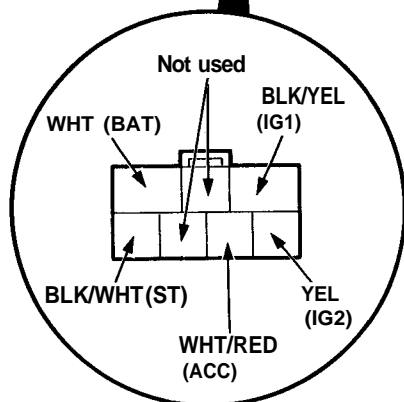


View from wire side

Terminal Position	WHT/ RED (ACC)	WHT (BAT)	BLK/ YEL (IG1)	YEL (IG2)	BLK/ WHT (ST)
0					
I	○	○			
II	○	○	○	○	
III		○	○		○

Electrical Switch Replacement

1. Remove the dashboard lower cover (see page [23-81](#)).
2. Disconnect the 7-P connector from the under-dash fuse/relay box.
3. Insert the key and turn it to "0".
4. Remove the two screws and replace the switch.

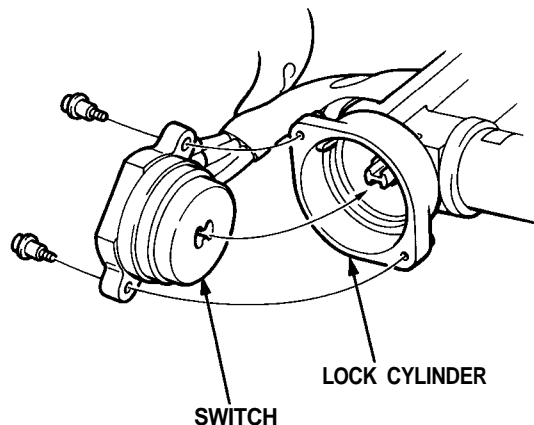

SWITCH

LOCK CYLINDER