


Starting System


Clutch Interlock Switch Test (M/T)

1. Pry the courtesy light controller and TCS switch (GS) out from the dashboard lower cover.


NOTE: Be careful not to damage the controller and TCS switch (GS) or the dashboard lower cover.

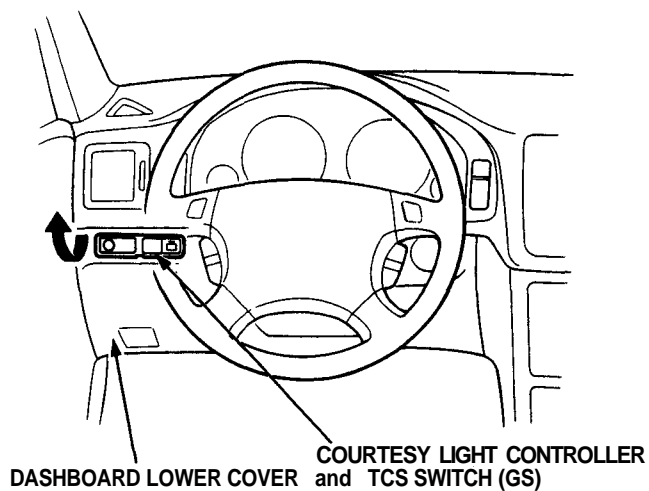

2. Disconnect the connectors from the courtesy light controller and TCS switch (GS).
3. Remove the dashboard lower cover.

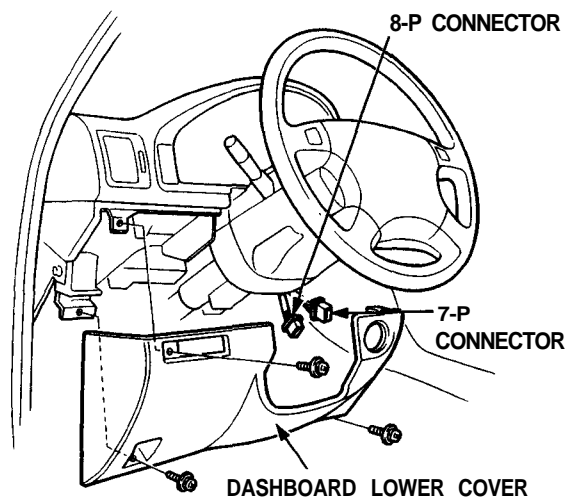

4. Disconnect the 2-P connector from the switch.

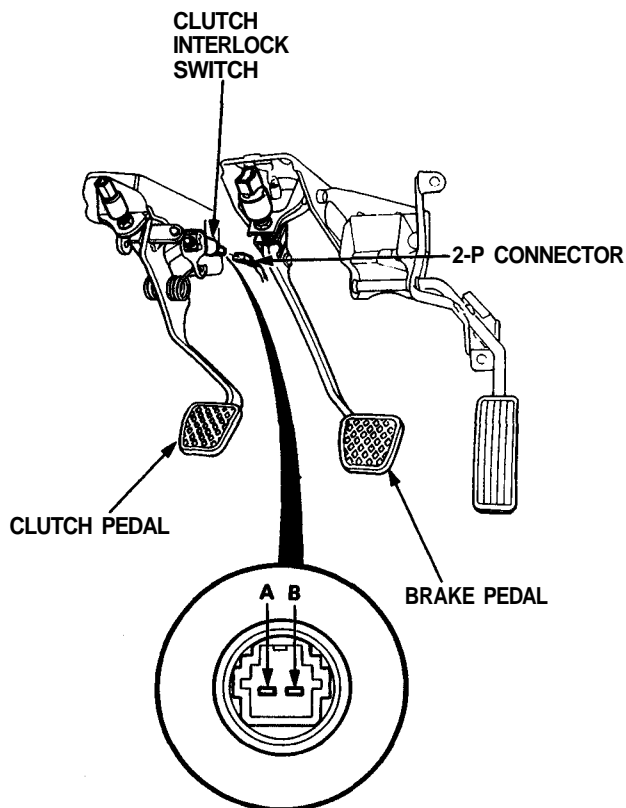

5. Check for continuity between the terminals according to the table.

Terminal	A	B
Clutch Pedal		
RELEASED		
PUSHED	○	○

6. If necessary, replace the switch or adjust the switch position (see [section 12](#)).