




## Starter Solenoid Test

1. Remove the starter solenoid from the gear housing.

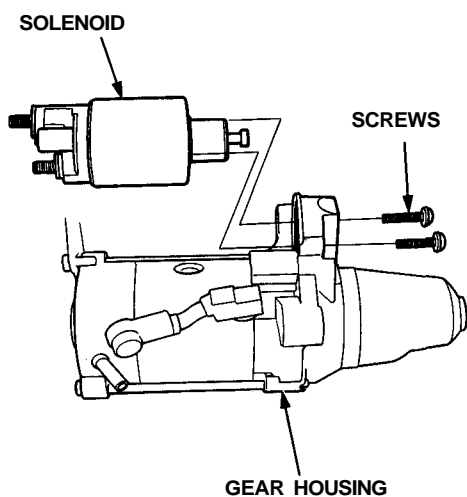

2. Check for continuity between the terminals in each solenoid plunger position according to the table.

Terminal Position	B	M	S	GROUND
RELEASED				
PUSHED				

