




Gauge Assembly

Gauge/Indicator Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- After installing the gauge assembly, recheck the operation of the SRS indicator light.

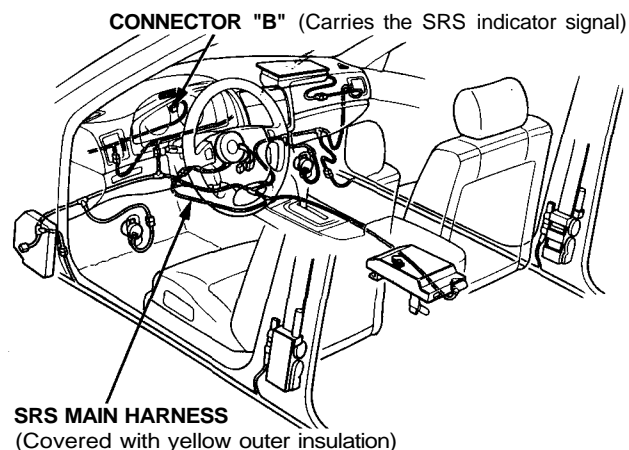

SPEEDOMETER

Indicates 60 mph [60 km/h] at 1026 [637] rpm of the vehicle speed sensor (VSS).

TACHOMETER

Indicates 100 rpm at 300 pulses per minute of the ignition control module (ICM).

