




Interlock System


Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

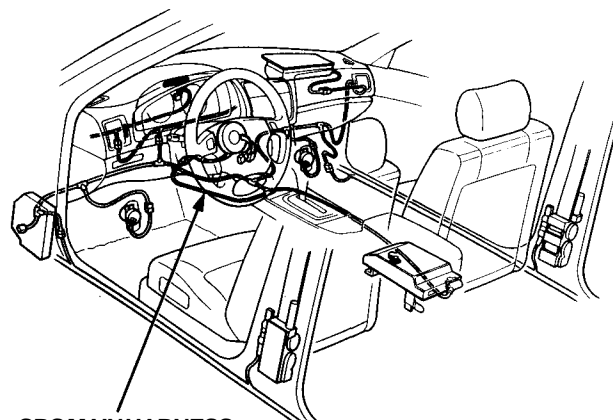

SRS MAIN HARNESS
(Covered with yellow outer insulation)

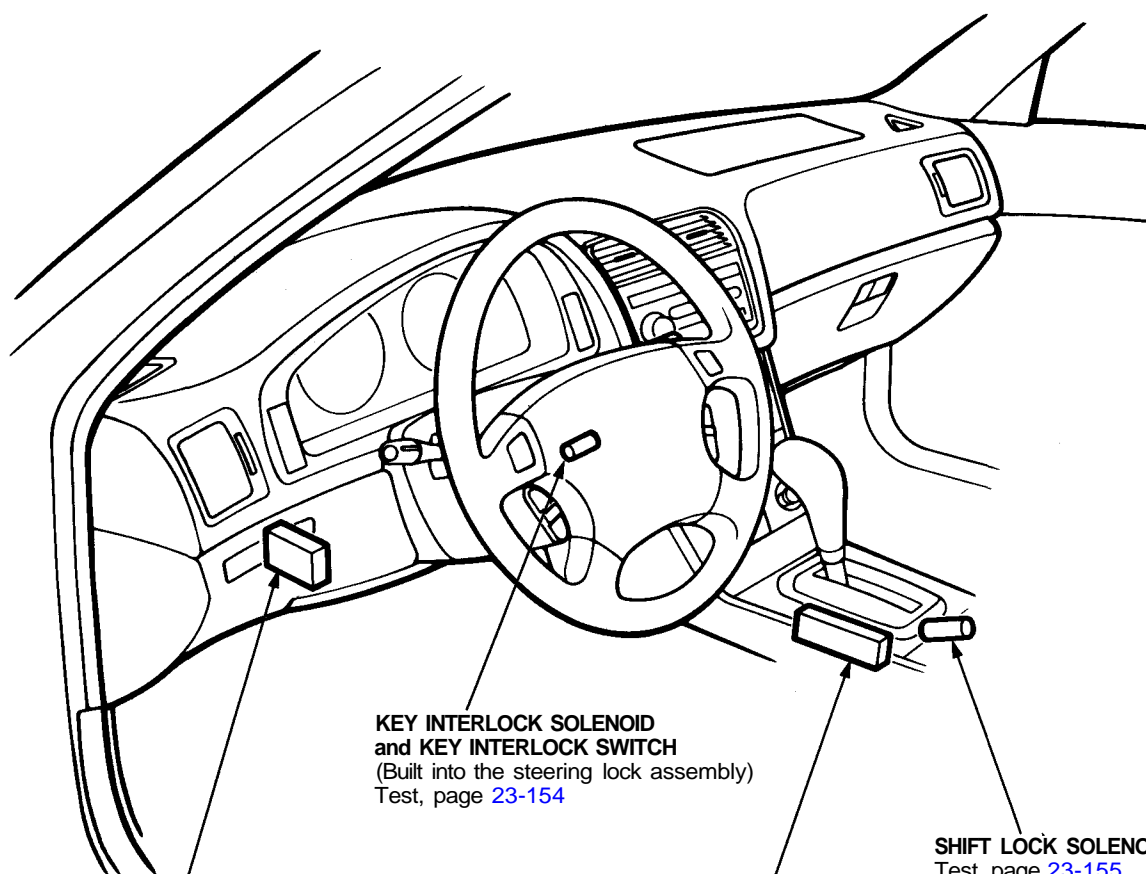

INTERLOCK CONTROL UNIT
Input test, page 23-153

**KEY INTERLOCK SOLENOID
and KEY INTERLOCK SWITCH**
(Built into the steering lock assembly)
Test, page 23-154

A/T GEAR POSITION SWITCH
Test, page 23-160
Replacement, 23-161

SHIFT LOCK SOLENOID
Test, page 23-155
Replacement, page 23-155