


# Interlock System

## Key Interlock Solenoid Test

1. Remove the dashboard lower cover (see page 23-81).
2. Disconnect the 8-P connector from the main wire harness.

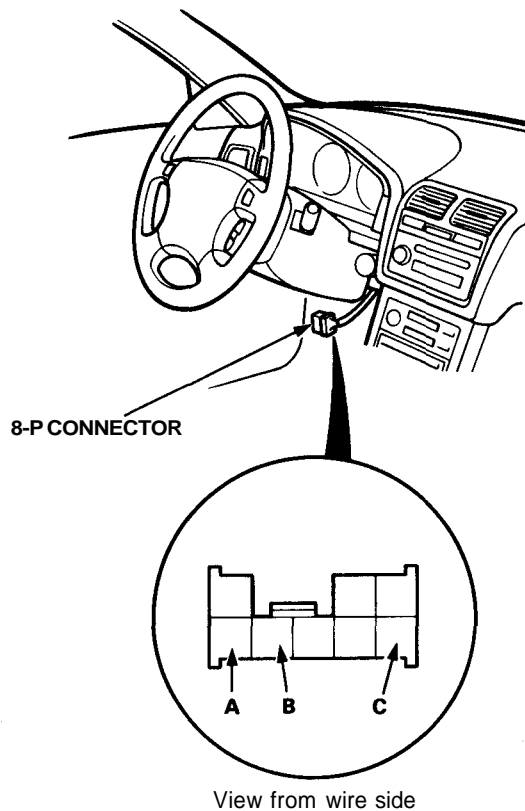

3. Check for continuity between the terminals in each switch position according to the table.

Terminal		A	B	C
Position				
Ignition switch ACC (I)	Key pushed in		○ — ○	○
	Key released	○ — ○		

4. Check that the key cannot be removed with power and ground connected to the A and C terminals.
  - If the key cannot be removed, the key interlock solenoid is OK.
  - If the key can be removed, replace the steering lock assembly (key interlock solenoid is not available separately).