


# A/T Gear Position Indicator

## Component Location Index

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-407](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- After installing the gauge assembly, recheck the operation of the SRS indicator light.

CONNECTOR "B" (Carries the SRS indicator signal)

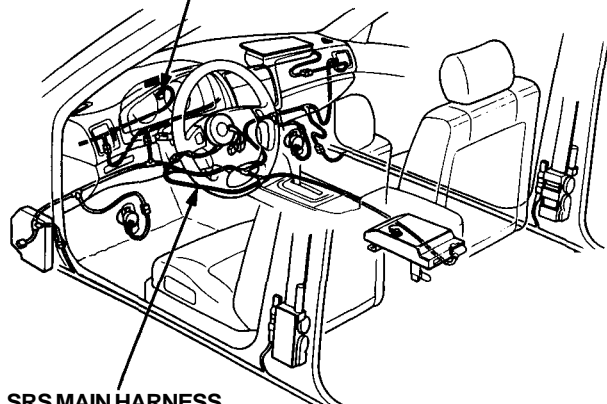

SRS MAIN HARNESS  
(Covered with yellow outer insulation)

