


# A/T Gear Position Indicator

## Bulb Replacement

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- After installing the gauge assembly, recheck the operation of the SRS indicator light.


CONNECTOR "B" (Carries the SRS indicator signal)

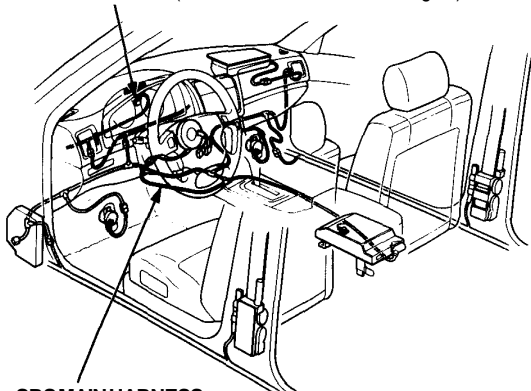

**SRSMAINHARNESS**  
(Covered with yellow outer insulation)

1. Remove the gauge assembly (see page 23-138).
2. Disassemble the gauge assembly (see page 23-140).

3. Remove the bulb from printed circuit board B.

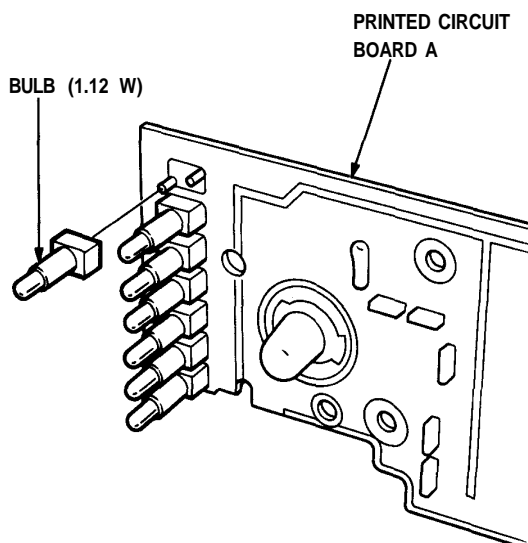

4. Install in the reverse order of removal.