




# Lighting System

## Component Location Index

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

CONNECTOR "B" (Carries the SRS indicator signal)

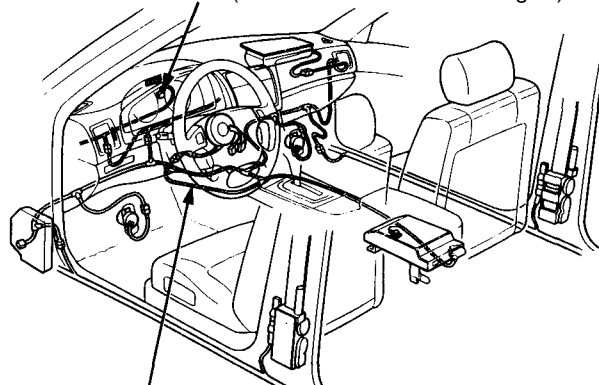

SRS MAIN HARNESS  
(Covered with yellow outer insulation)

### SECURITY CONTROL UNIT

Input Test, page 23-345 ('91-'92) or 23-321 ('93-'95)


### HIGH BEAM INDICATOR LIGHT

(In the gauge assembly)

Bulb Locations, page 23-139 ('91-'92) or 23-141 ('93-'95)

### DRL INDICATOR LIGHT (Canada)

(In the gauge assembly) Bulb Locations,  
page 23-139 ('91-'92) or 23-141 ('93-'95)

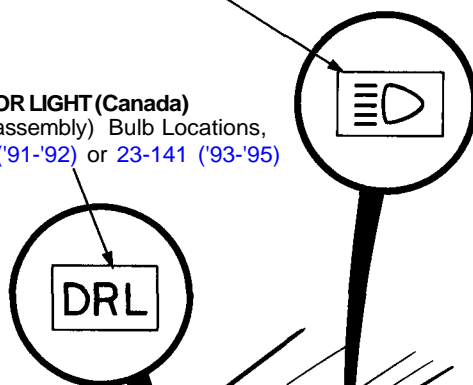


### COMBINATION LIGHT SWITCH

Test, page

23-180 ('91-'92) or  
23-182 ('93-'95)

Replacement, page 23-186

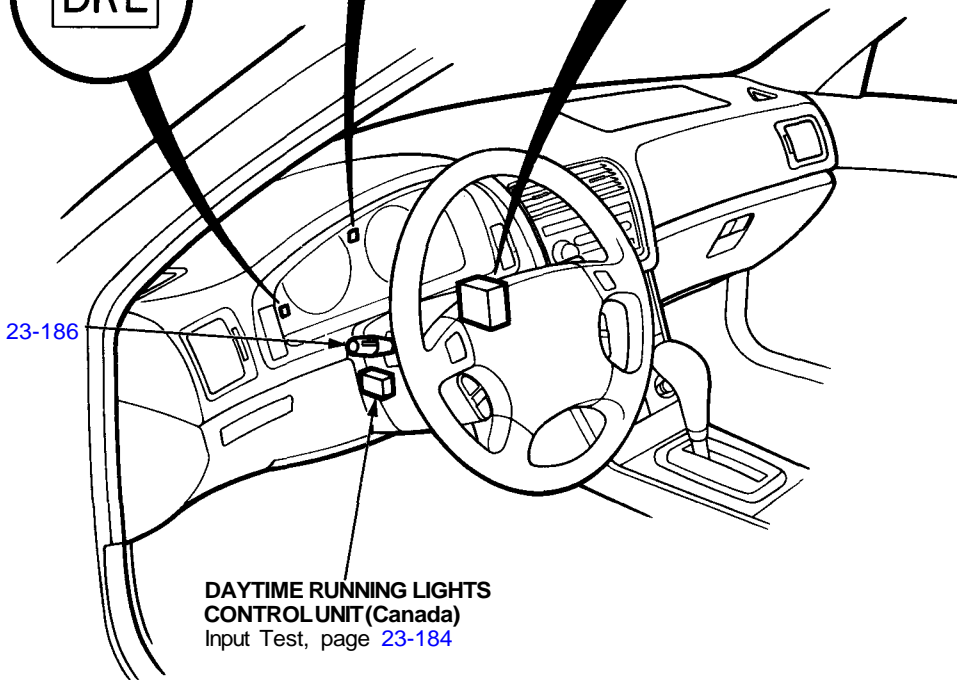

### DAYTIME RUNNING LIGHTS CONTROL UNIT (Canada)

Input Test, page 23-184

(cont'd)

# Lighting System

## Component Location Index (cont'd)

UNDER-HOOD  
FUSE/RELAY BOX

TAILLIGHT RELAY  
Test, page [23-76](#)

HEADLIGHT RELAY  
Test, page [23-77](#)

DIMMER RELAY  
Test, page [23-78](#)

HEADLIGHTS  
Adjustment, page [23-188](#)  
Replacement, page [23-191](#)

