


Lighting System

Combination Light Switch Test


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.


1. Remove the dashbord lower cover (see page 23-81).
2. Disconnect the 14-P connector from the main wire harness.
3. Inspect the connector terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, check for continuity between them in each switch position according to the tables.

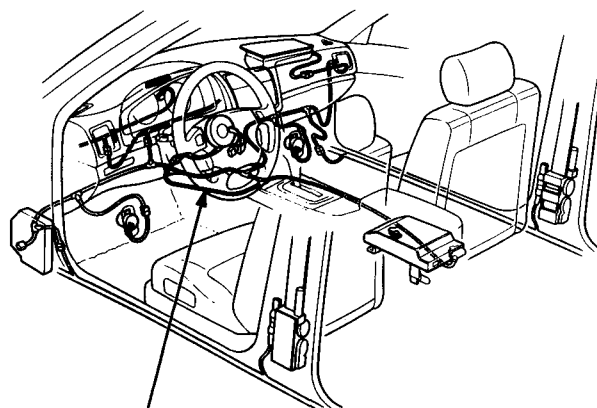

SRS MAIN HARNESS
(Covered with yellow outer insulation)

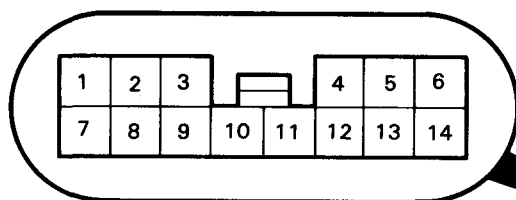


View from wire side

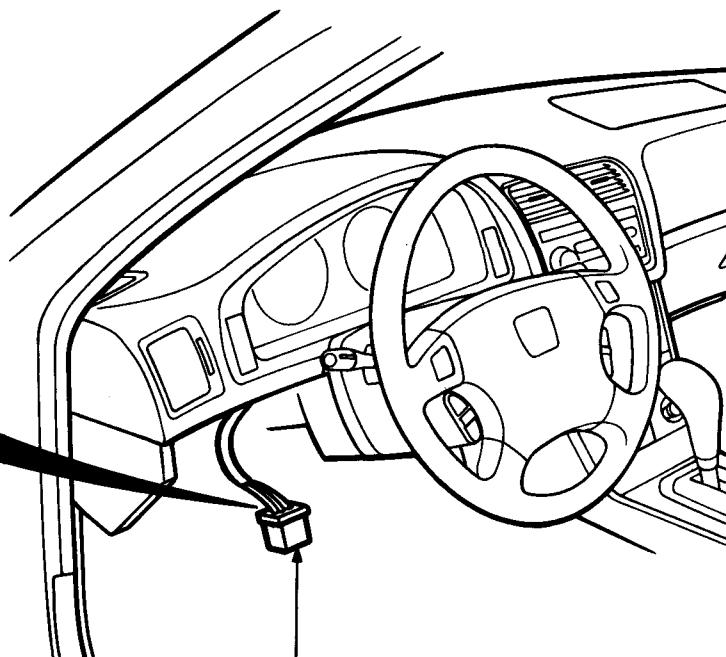

14-P CONNECTOR




Headlight/Dimmer/Passing Switch:

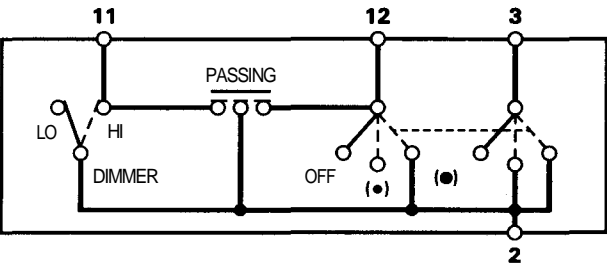

Terminal		2	3	11	12
Position					
Headlight switch	OFF				
	•	○	○		
	•	○	○		○
	LOW	○		○	
Passing switch	HIGH	○			
	OFF				
Passing switch	ON	○		○	○

Turn Signal Switch:

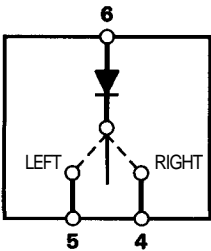

Terminal		4	5		6
Position					
RIGHT		○		◀	○
NEUTRAL					
LEFT			○	▶	○