


Lighting System

Combination Light Switch Replacement


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

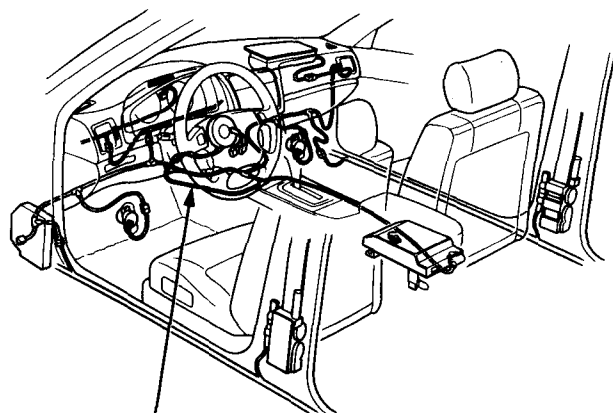


SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Pry the courtesy light controller and TCS switch (GS) out of the dashboard lower cover.

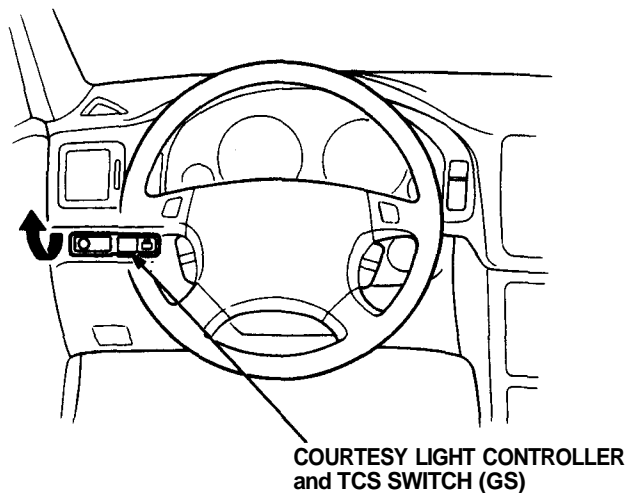


2. Disconnect the connectors from the controller and TCS switch (GS), then remove the controller and the switch.

3. Remove the three screws and dashboard lower cover.

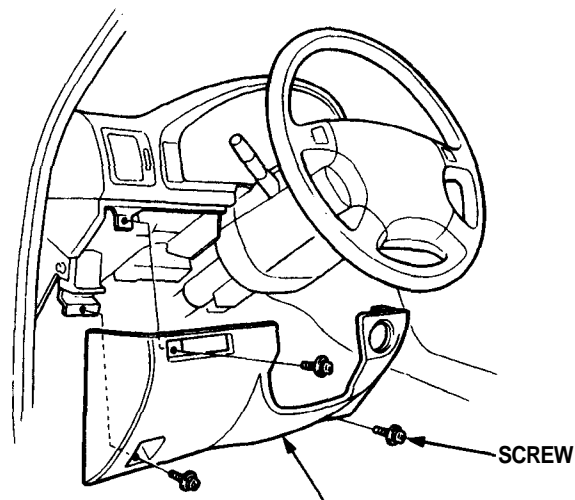

DASHBOARD LOWER COVER


4. Remove the steering column tilt cover.

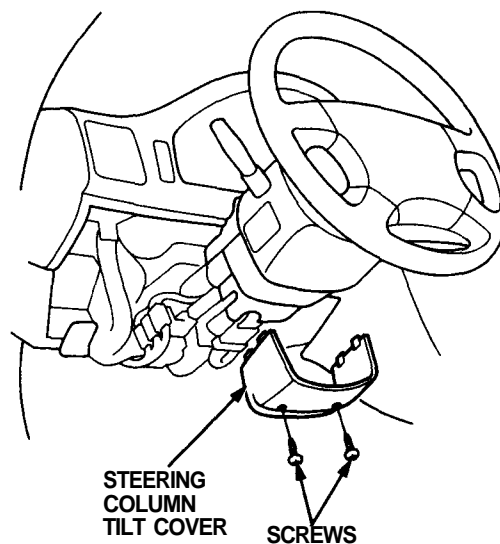

SCREWS



5. Remove the screws, then remove the steering column covers, and disconnect the switch connector.

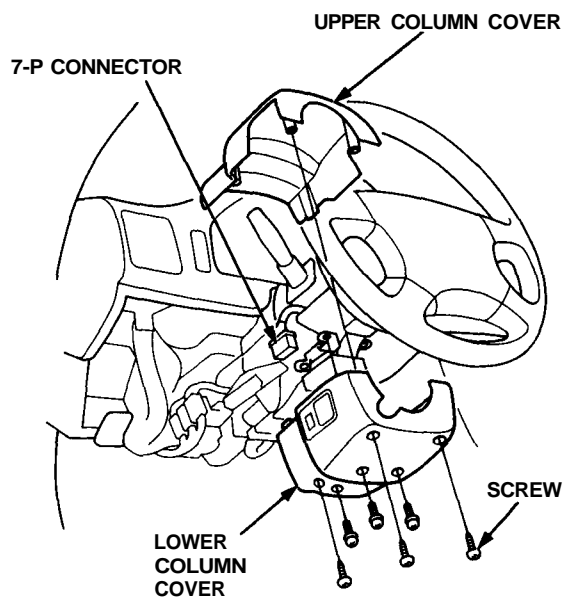

6. Turn the steering wheel toward the combination light switch, and remove the two screws.
7. Disconnect the 14-P connector from the switch, then remove the switch.

