



Front Turn Signal Lights

Replacement

1. Remove the screw and the cover.

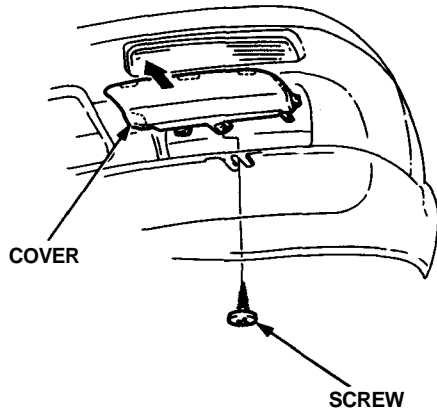

2. Loosen the mounting screw and pull the light off, then disconnect the 2-P connector.

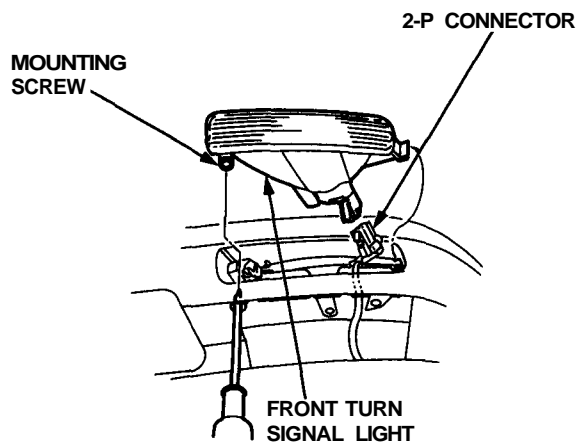

3. Turn the bulb socket 45° counterclockwise to remove it from the housing and replace the bulb.

