



Taillights

Replacement

1. Open the trunk lid.
2. Remove the taillight access panel.
3. Remove the rear trim panel.

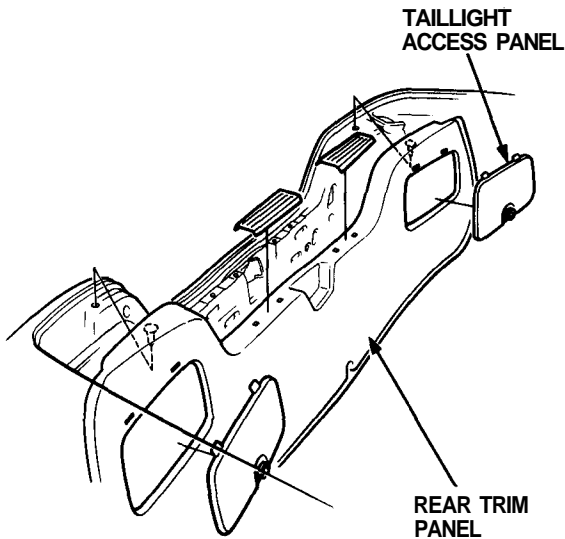

4. Disconnect the 8-P connector from the taillight.
5. Remove the six mounting nuts and the taillight assembly.

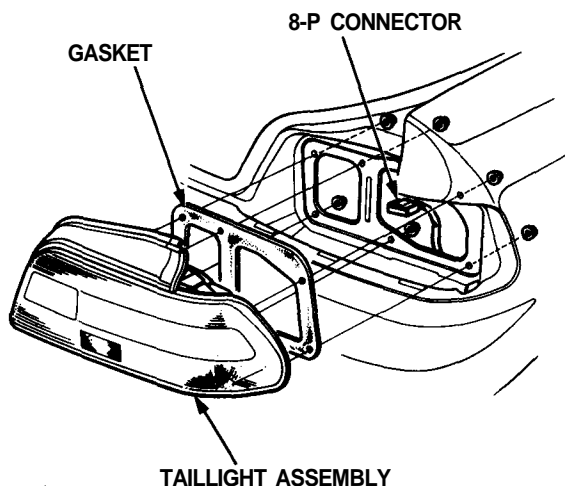


NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing, run water over the lights to make sure they do not leak.

Bulb Replacement

1. Open the trunk lid.
2. Remove the taillight access panel.
3. Disconnect the 8-P connector and remove the screws, then remove the bulb socket housing.

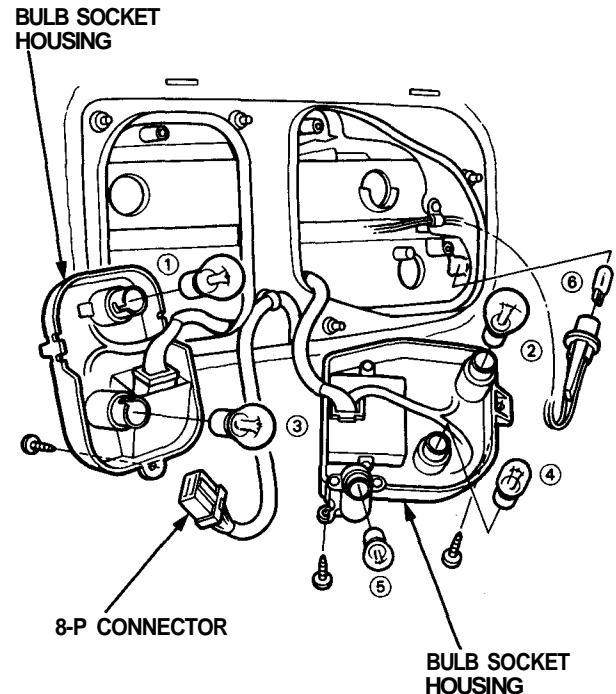

4. Remove the bulbs from the housing.

- ① } BRAKE LIGHT/TAILLIGHT
- ② } BULBS (32CP/2CP)
- ③ : BACK-UP LIGHT BULB (32CP)
- ④ : TURN SIGNAL LIGHT BULB (45CP)
- ⑤ : TAILLIGHT BULB (4CP)
- ⑥ : REAR SIDE MARKER LIGHT BULB (3CP)