



License Plate Lights

Replacement

1. Remove the eight screws and disconnect the 4-P connector.

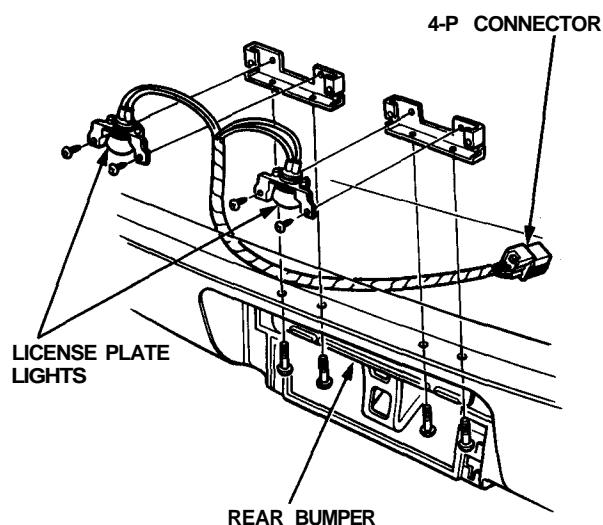

2. Turn the bulb socket 45° counterclockwise to remove it from the housing, and replace the bulb.

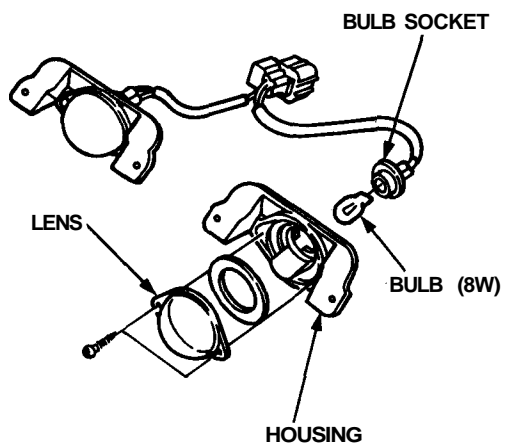

3. If necessary, separate the lens from the housing by removing the two screws.