


Dash Lights Brightness Control

Component Location Index



CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-407](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

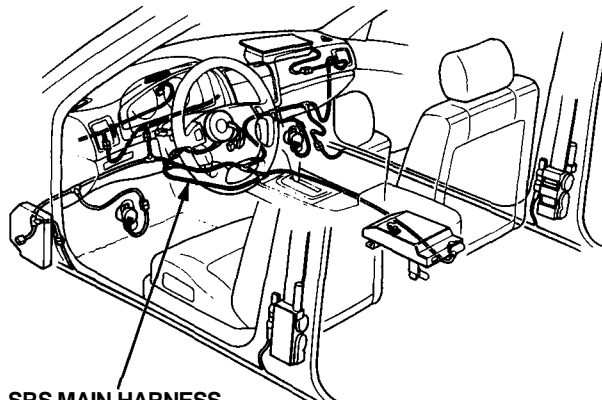

SRS MAIN HARNESS
(Covered with yellow outer insulation)

**DASH LIGHTS BRIGHTNESS
CONTROLLER**
Test/Replacement, page [23-199](#)

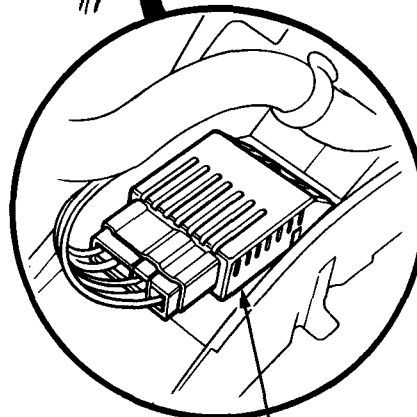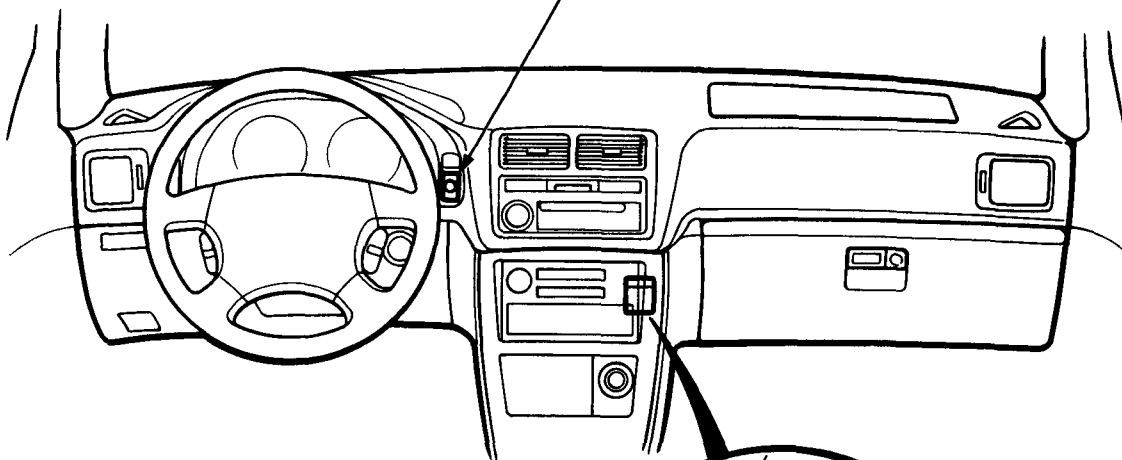

**DASH LIGHTS BRIGHTNESS
CONTROL UNIT**
Input Test, page [23-198](#)