



# Entry Light Control System

## Front Ceiling Light Test/Replacement

1. Turn the light switch OFF.
2. Pry off the lens.

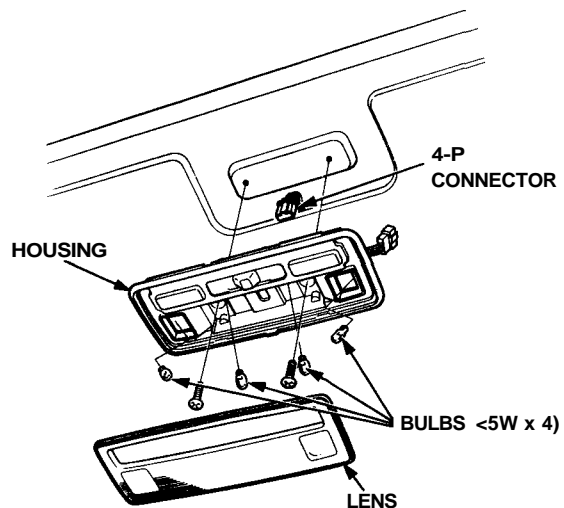

3. Remove the two screws from the housing.
4. Disconnect the 4-P connector and remove the housing.
5. Check for continuity between the terminals in each switch position according to the table.

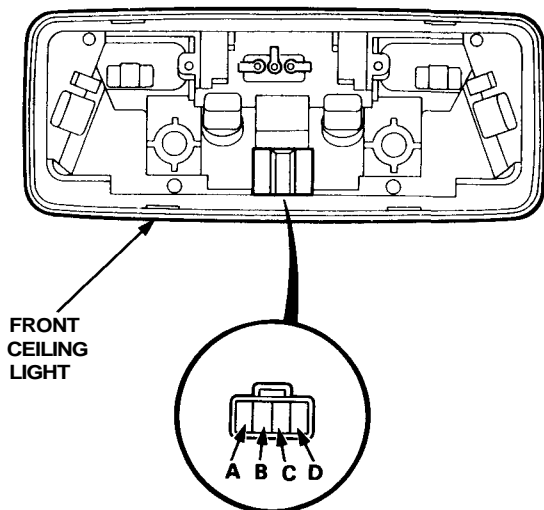

Terminal		A		B	C	D
Position						
CEILING LIGHTS	OFF	○	⊗			○
	DOOR	○	⊗	○		○
	ON	○	⊗		○	○
SPOT - LIGHTS	SW1	○	⊗		○	
	SW2	○	⊗		○	

REAR CEILING LIGHT

No.57(15A)FUSE

