





Rear Ceiling Light Test/Replacement

1. Turn the front ceiling light switch OFF.
2. Pry off the lens.

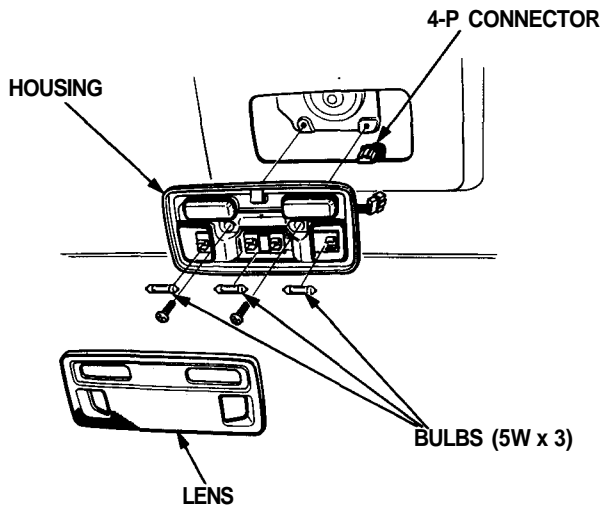

3. Remove the two screws from the housing.
4. Disconnect the 4-P connector and remove the housing.
5. Check for continuity between the terminals in each switch position according to the table.

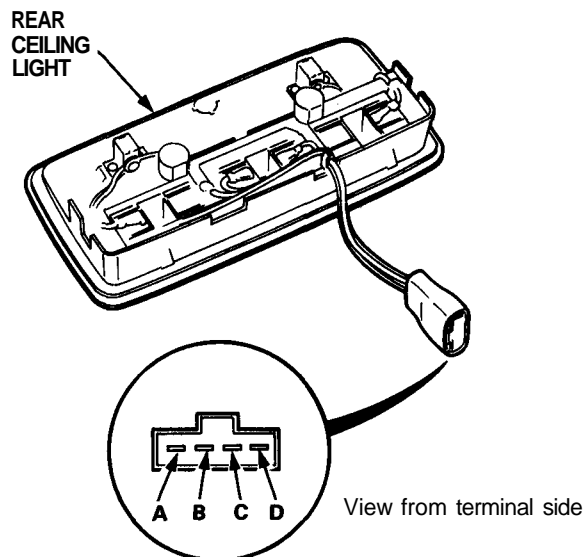

Terminal		A		B	C		D
Position							
CEILING LIGHT	Under all conditions	○	⊗	○			
SPOT-LIGHTS	SW1	ON			○	⊗	○
		OFF					
	SW2	ON			○	⊗	○
		OFF					

