


Entry Light Control System

Door Switch Test


NOTE: Be careful not to damage the door panel when removing it.

Front Door Switch:

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 8-P connector from the door lock actuator assembly.

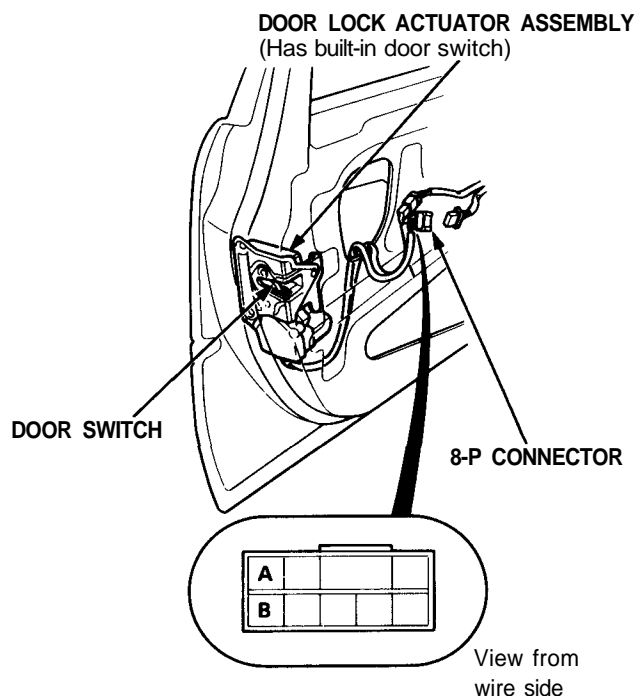


3. Check continuity between the A and B terminals.
 - There should be continuity with the switch released (door open).
 - There should be no continuity with the switch pushed (door closed).

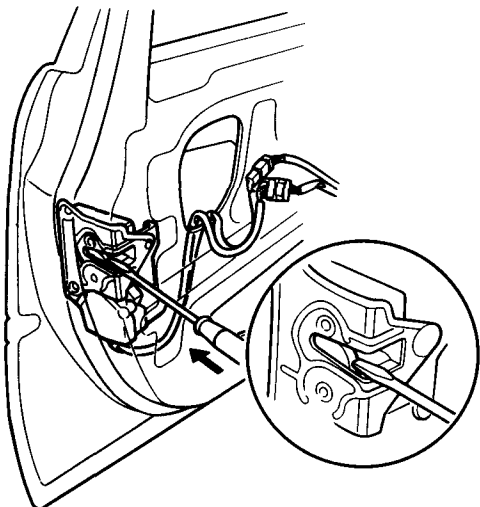

Rear Door Switch:

1. Remove the rear door panel (see [section 20](#)).
2. Disconnect the 6-P connector from the door lock actuator assembly.

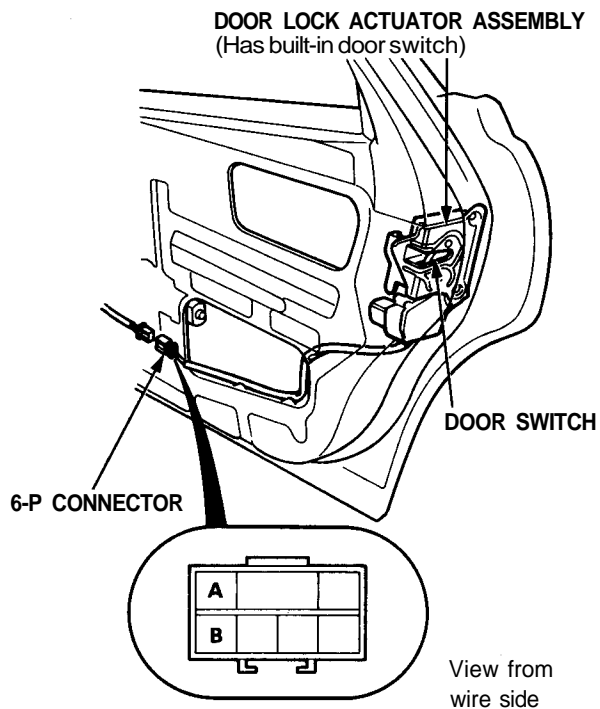

3. Check continuity between the A and B terminals.
 - There should be continuity with the switch released (door open).
 - There should be no continuity with the switch pushed (door closed).