



# Trunk Light and Latch Switch

## Trunk Light Replacement

1. Pry the trunk light lens off the housing.
2. Pry out the light housing, and disconnect the 3-P connector from it.

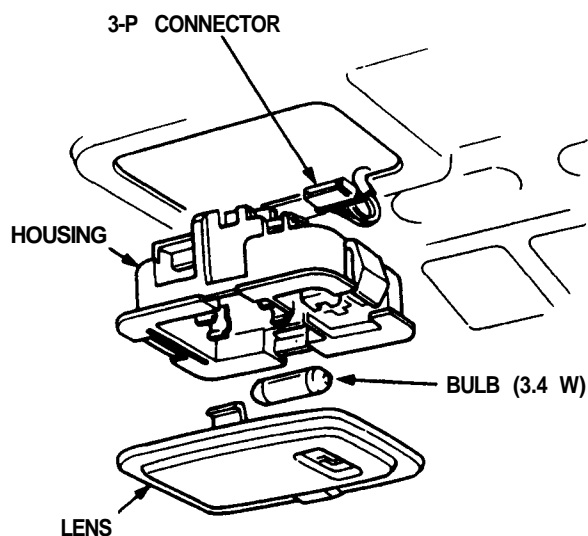


From No.57 (15A) FUSE

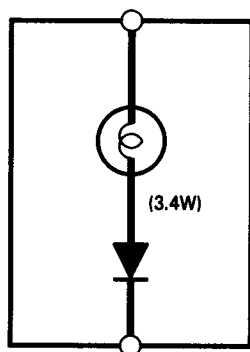

To TRUNK LATCH SWITCH

## Latch Switch Test/Replacement

1. Open the trunk lid, and remove the trunk rear trim panel (see [section 20](#)).
2. Disconnect the 6-P connector from the trunk latch.

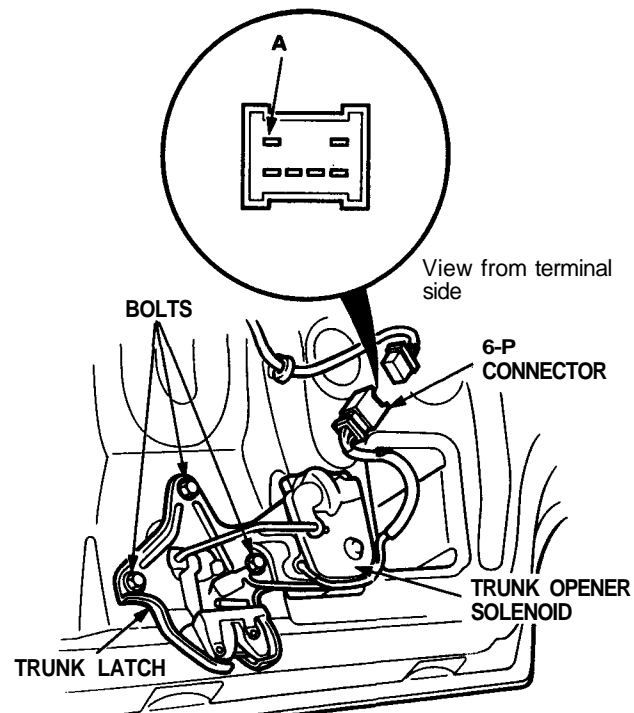

3. There should be continuity between the A terminal and body ground when the latch is in the open position.
4. If necessary, remove the three bolts from the trunk lid, then remove the trunk latch assembly. The switch cannot be replaced separately.