


Side Marker/Turn Signal/Hazard Flasher System

Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

CONNECTOR "B" (Carries the SRS indicator signal)

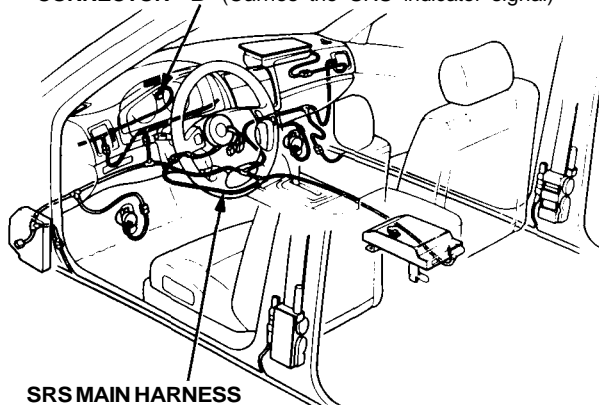

SRS MAIN HARNESS
(Covered with yellow outer insulation)

SIDE MARKER FLASHER CIRCUIT

(In the integrated control unit)

Input Test, page 23-173 ('91-'92)

or 23-175 ('93-'95 Models)

TURN SIGNAL/HAZARD RELAY

Input Test, page 23-218 ('93-'95)

or 23-216 ('91-'92 Models)

TURN SIGNAL INDICATOR LIGHTS

(In the gauge assembly)


Bulb Locations, page 23-139

('91-'92) or 23-141 ('93-'95 Models)

HAZARD WARNING SWITCH

Removal, page 23-220

Test, page 23-220

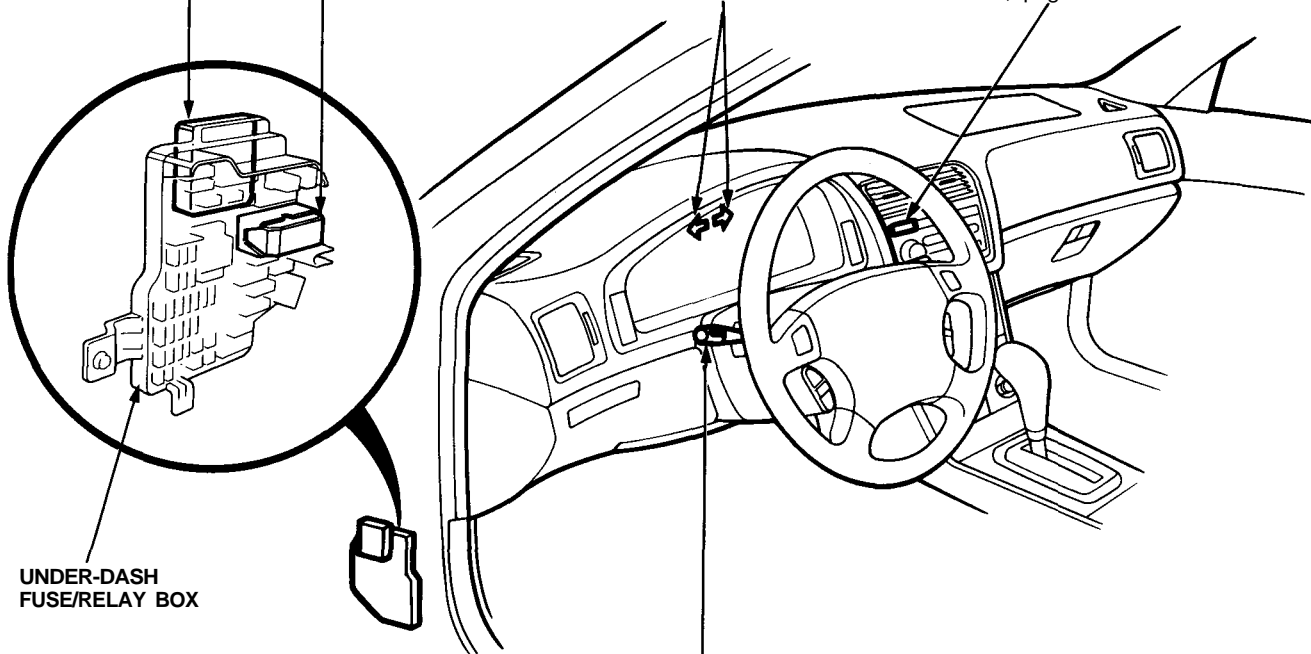

UNDER-DASH
FUSE/RELAY BOX

COMBINATION LIGHT/TURN SIGNAL SWITCH

Test, page 23-182 ('93-'95) or

23-180 ('91-'92 Models)

Replacement, page 23-186