


Side Marker/Turn Signal/Hazard Flasher System

Hazard Warning Switch Removal

CAUTION: Be careful not to damage the center air vent.

1. Remove the heater control unit/center air vent (see [section 20](#)).
2. Separate the heater control unit from the center air vent (see [section 20](#)).
3. Remove the clock from the heater control unit.
4. Remove the hazard warning switch from the clock.

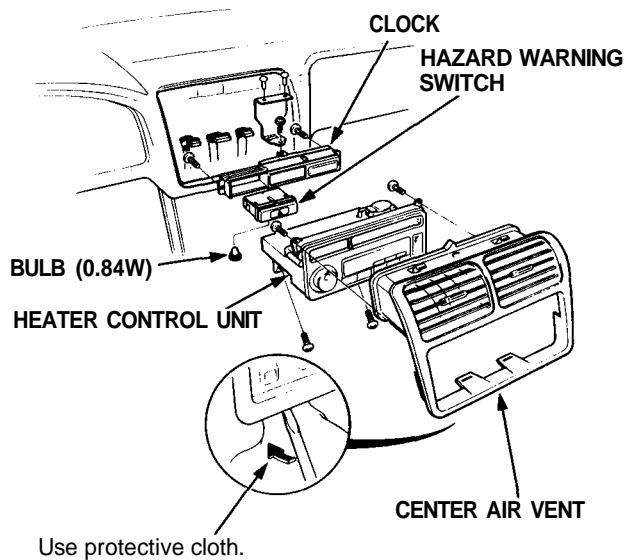

5. Turn the bulb socket 45° counterclockwise to remove it.

Hazard Warning Switch Test

1. Remove the hazard warning switch.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal	C		B	D	A	E
Position						
ON	○	→	○	○	○	○
OFF						

