




# Cigarette Lighter


## Component Location Index

### CAUTION:


- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-407](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

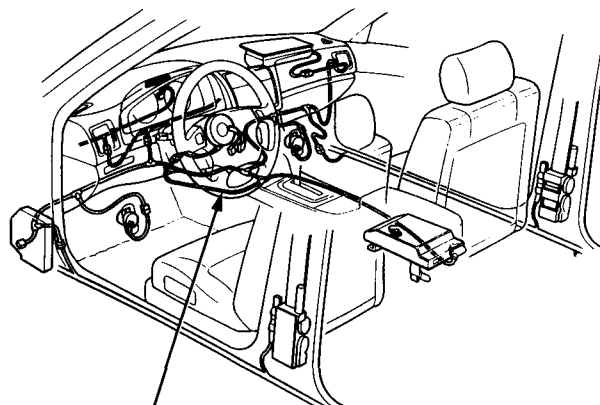

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

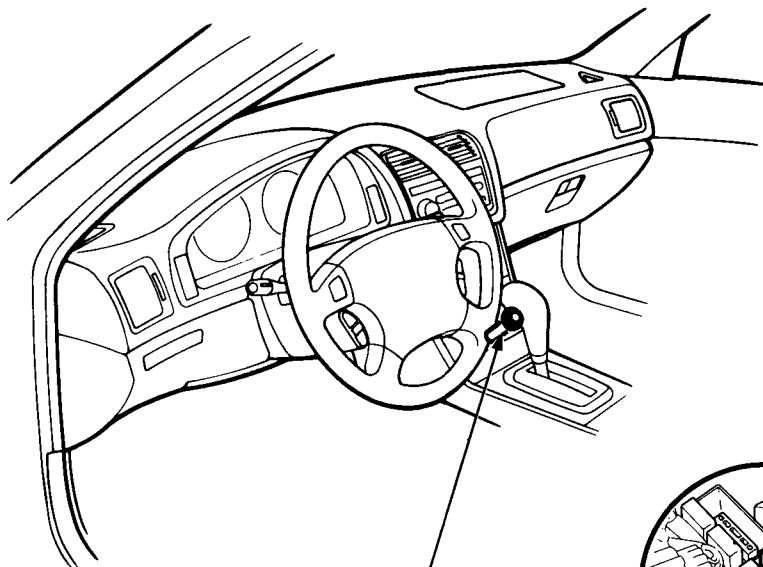

**CIGARETTE LIGHTER**  
Replacement, page [23-223](#)

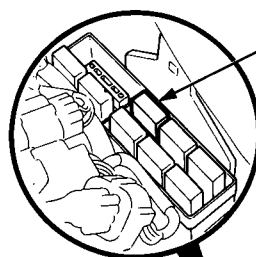

**CIGARETTE LIGHTER RELAY**  
Test, page [23-76](#)

