




## Amplifier Terminals

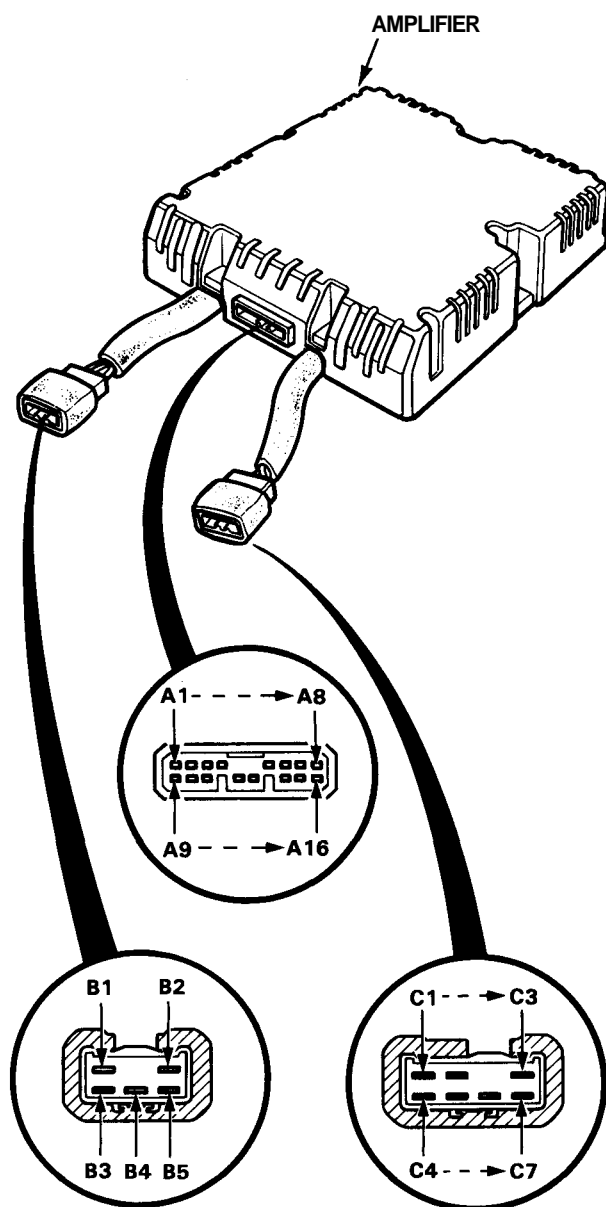

Terminal	Wire	Connects to
A1	ORN	Radio/Left rear speaker ⊕
A2	GRN	Radio/Left rear speaker ⊖
A3	YEL	Radio/Right rear speaker ⊕
A4	RED	Radio/Right rear speaker ⊖
A5	BLU	Radio/Right front speaker ⊕
A6	BRN	Radio/Right front speaker ⊖
A7	WHT	Radio/Left front speaker ⊕
A8	BLK	Radio/Left front speaker ⊖
A9	—	(Not used)
A10	—	(Not used)
A11	—	(Not used)
A12	—	(Not used)
A13	—	(Not used)
A14	—	(Not used)
A15	—	(Not used)
A16	YEL/WHT	Power (With radio switch ON)

B1	RED/YEL	Right rear speaker/tweeter ⊕
B2	BLU/YEL	Left rear speaker/tweeter ⊕
B3	BRN	Right rear speaker/tweeter ⊖
B4	—	(Not used)
B5	GRY	Left rear speaker/tweeter ⊖

C1	RED	Right front speaker/tweeter ⊕
C2	—	(Not used)
C3	BLU	Left front speaker/tweeter ⊕
C4	RED/WHT	Right front speaker/tweeter ⊖
C5	WHT/BLU	Constant power
C6	BLK	Ground (G253)
C7	BLU/ORN	Left front speaker/tweeter ⊖