




## Radio Remote Switch Removal

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

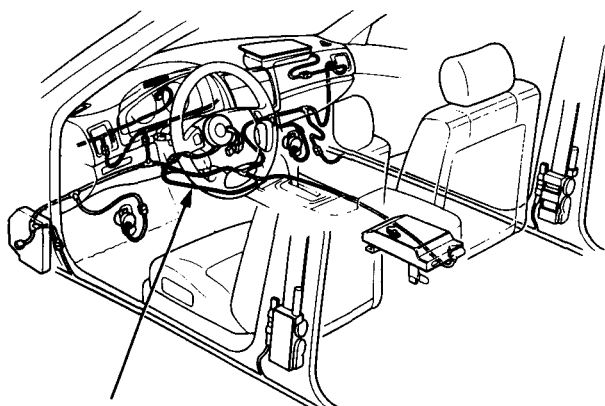


### SRS MAIN HARNESS

(Covered with yellow outer insulation)

1. Remove the switch cover from the radio remote switch.
2. Remove the radio remote switch from the steering wheel by removing the two screws, and disconnect the 2-P connector.

### RADIO REMOTE SWITCH

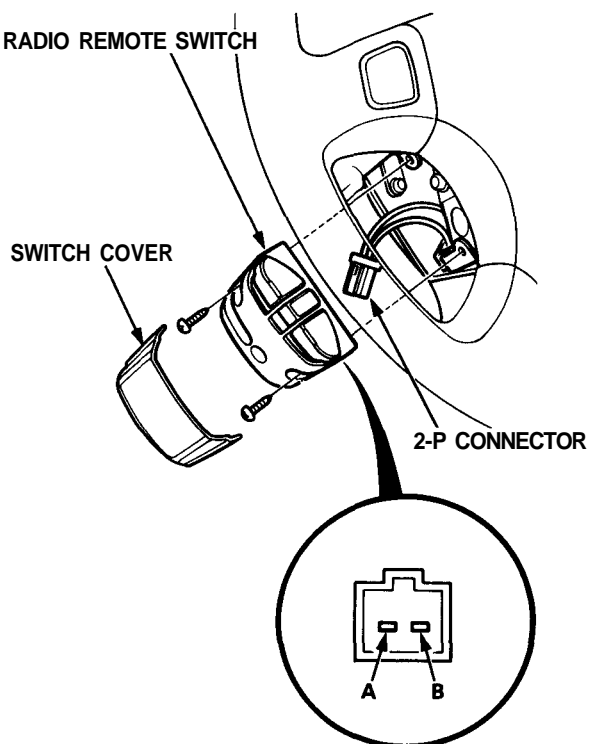

## Radio Remote Switch Test

1. Remove the remote switch from the steering wheel.
2. Measure resistance between the A and B terminals in each switch position according to the table.

Position	Resistance
OFF	Approx. 3.6 K $\Omega$
● → ● (SEEK)	Approx. 800 $\Omega$
▲ (VOL. UP)	Approx. 350 $\Omega$
▼ (VOL. DOWN)	Approx. 100 $\Omega$

