


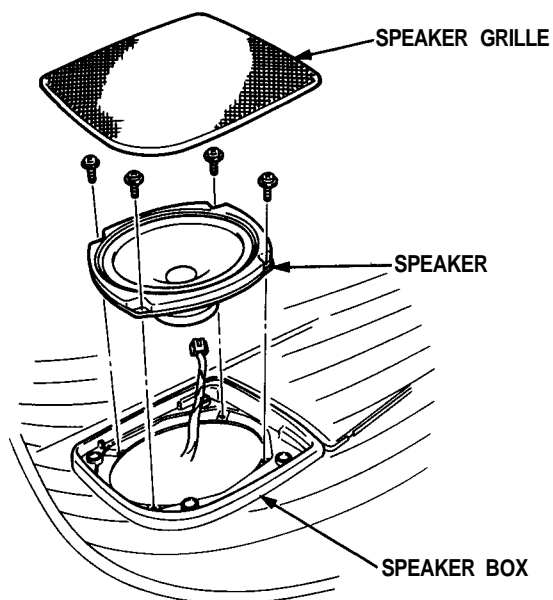

Rear Speaker Replacement

1. Pry off the rear speaker grille.
2. Remove the four screws, then disconnect the 2-P connector from the speaker.
3. Remove the speaker from the speaker box.



Rear Tweeter Replacement

1. Remove the rear speakers.
2. Remove the rear shelf (see [section 20](#)) and disconnect the 2-P connector from the tweeter.
3. Remove the clips and replace the tweeter.

