


Trunk Opener


Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-407](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

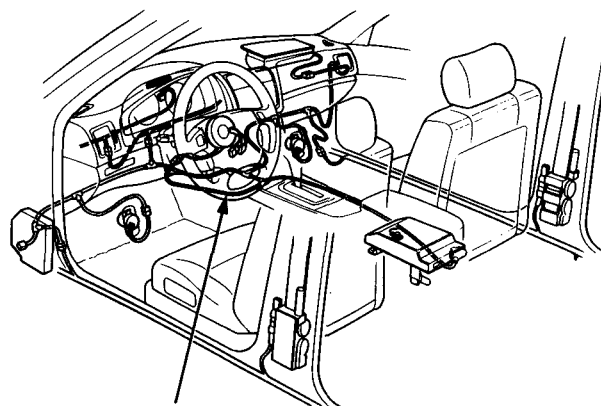

SRS MAIN HARNESS
(Covered with yellow outer insulation)

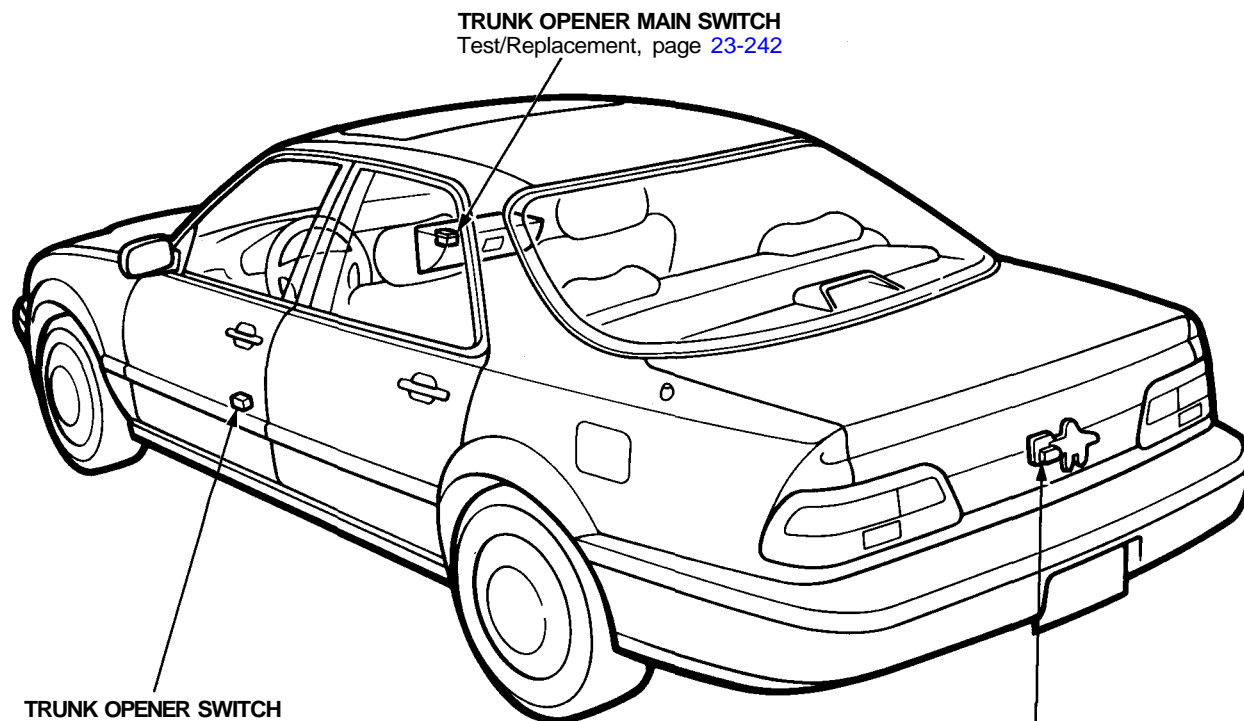

TRUNK OPENER MAIN SWITCH
Test/Replacement, page [23-242](#)

TRUNK OPENER SWITCH
Test/Replacement, page [23-243](#)

TRUNK OPENER SOLENOID
Test/Replacement, page [23-243](#)