


Trunk Opener


Main Switch Test/Replacement

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-407).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

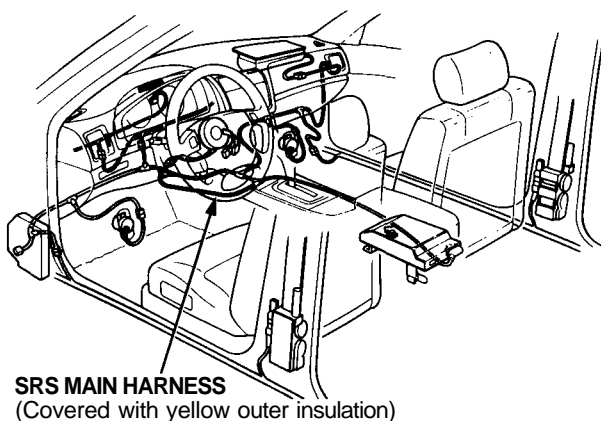

1. Remove the glove box lower panel (see [section 20](#)), then remove the glove box.
2. Disconnect the 2-P connector from the main switch.
3. Check for continuity between the No. 1 and No. 2 terminals.
 - There should be continuity with the switch ON.
 - There should be no continuity with the switch OFF.

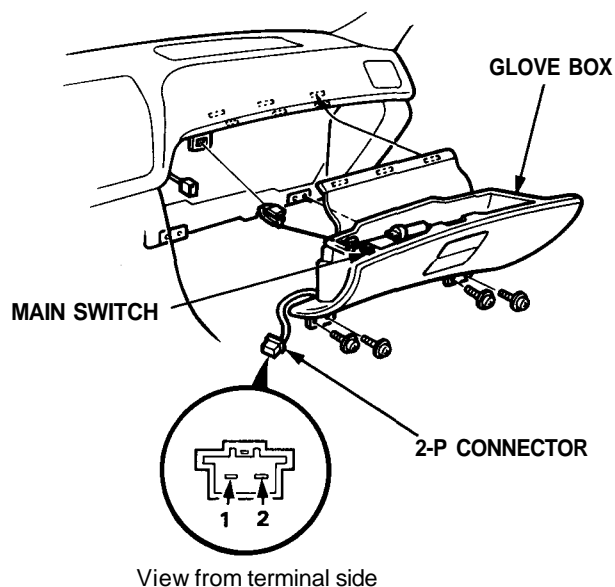

4. If necessary, remove the three screws and glove box side cover, then replace the switch.

