

Rear Window Defogger

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown indicator light bulb	Blown No. 3 (15 A) fuse (In the under-dash fuse/relay box)	Defogger timer circuit input (In the integrated control unit)	Blown No. 13 (7.5 A) fuse (In the under-dash fuse/relay box)	Blown No. 33 (40 A) fuse (In the under-hood fuse/relay box)	Function test	Defogger relay	Defogger switch	Broken defogger wire	Poor ground	Open circuit, loose or disconnected terminals
Symptom											
Defogger works, but indicator light does not go on.	1										YEL/BLK
Defogger does not work and indicator light does not go on.		1	3	2				4		G301 G302 G303	YEL, YEL/WHT or YEL/BLK
Defogger does not work, but indicator light goes on.					1	3	2	4	5	G691	YEL/WHT, YEL/BLK or BLK/GRN
Time is too long or too short compared with the normal defogger ON time (25 minutes).			1								