





Switch Removal

1. Remove the dashboard lower cover (see page 23-81).
2. Remove the two screws, then remove the instrument panel from the dashboard.

NOTE: Be careful not to damage the dashboard and steering column cover.

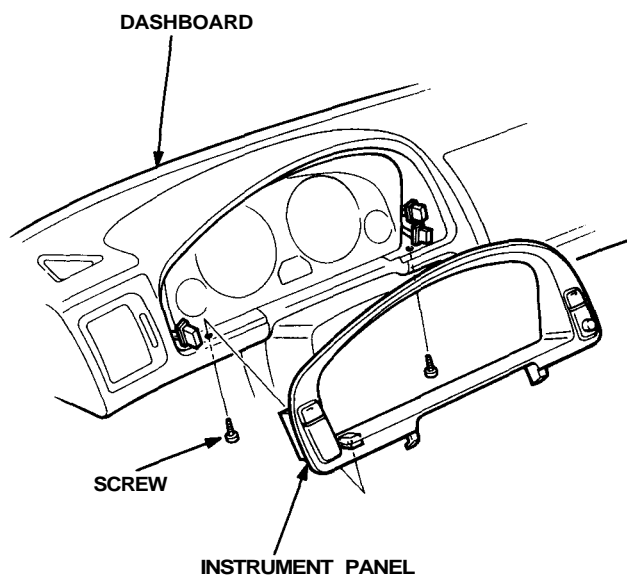


3. Disconnect the connectors from the instrument panel.
4. Remove the two screws from behind the instrument panel, then remove the switch assembly.

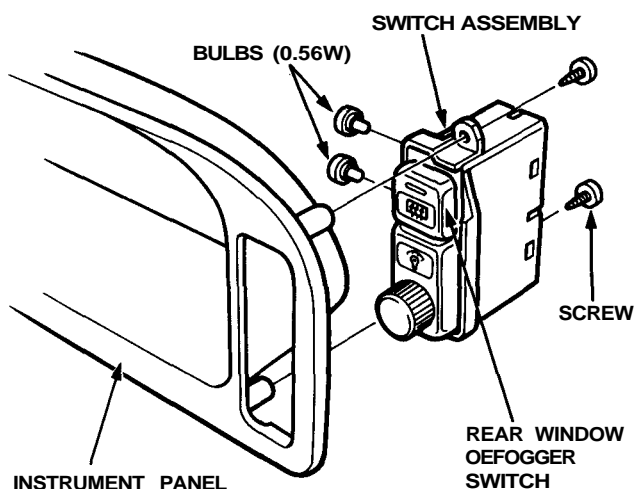

5. Turn the bulbs 45° counterclockwise to remove them.

Switch Test

1. Remove the dashboard lower cover (see page 23-81).
2. Remove the instrument panel, and disconnect the 6-P connector from the rear window defogger switch.
3. Check for continuity between the terminals in each switch position according to the table.

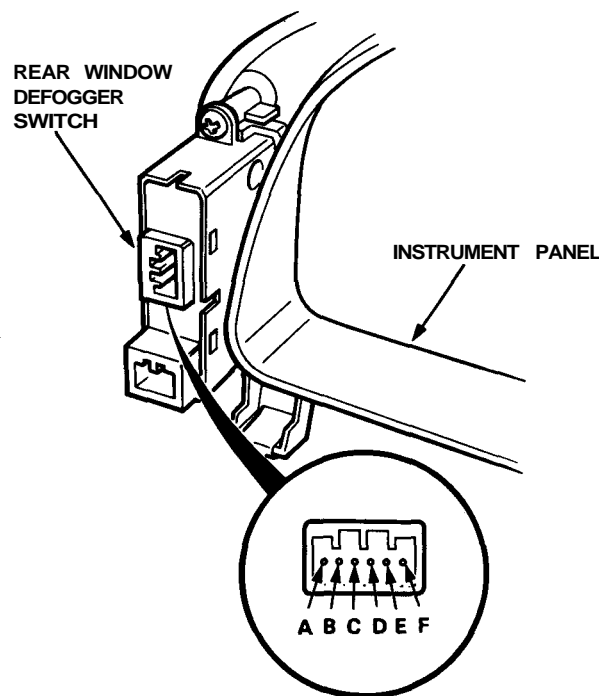

| Terminal | D | E | C | B | A | F |
|----------|---|---|---|---|---|---|
| Position | | | | | | |
| PUSHED | ○ | ○ | | | | |
| RELEASED | | | ○ | ○ | ○ | ○ |

