



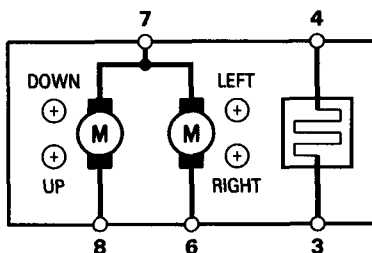

Power Mirror Motor Test

1. Remove the cover panel, then disconnect the 8-P connector from the mirror.

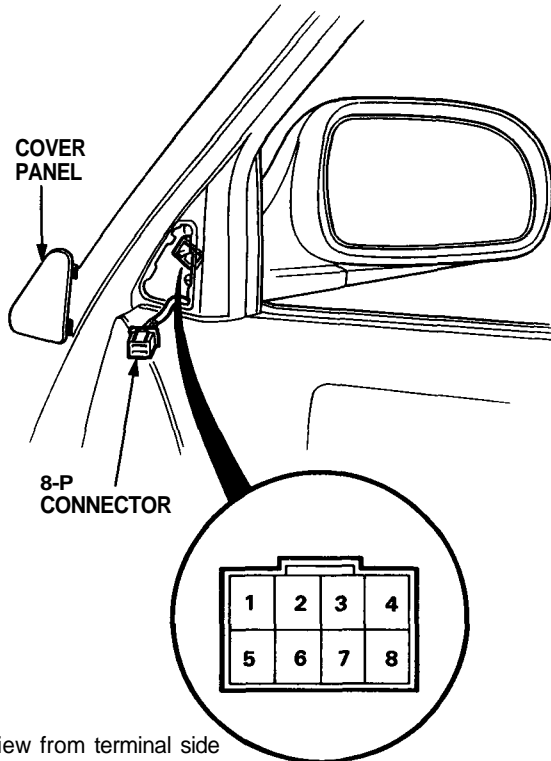

2. Test the actuator in each direction by connecting power and ground according to the table.

TILT:

Terminal Position	8	7
UP	+	-
DOWN	-	+

SWING:

Terminal Position	6	7
LEFT	-	+
RIGHT	+	-

3. Check for continuity between the terminals according to the table.

Defogger:

Terminal Position	3	4
ON	○	○