




Passenger's Switch Test

1. Remove the door panel (see [section 20](#)).
2. Remove the switch from the armrest, then disconnect the 8-P connector.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal	C	D	E	G	H
Position					
UP		○	○		
OFF		○	○	○	○
DOWN	○	○		○	○


NOTE: Right front switch is shown. Rear switches are similar.

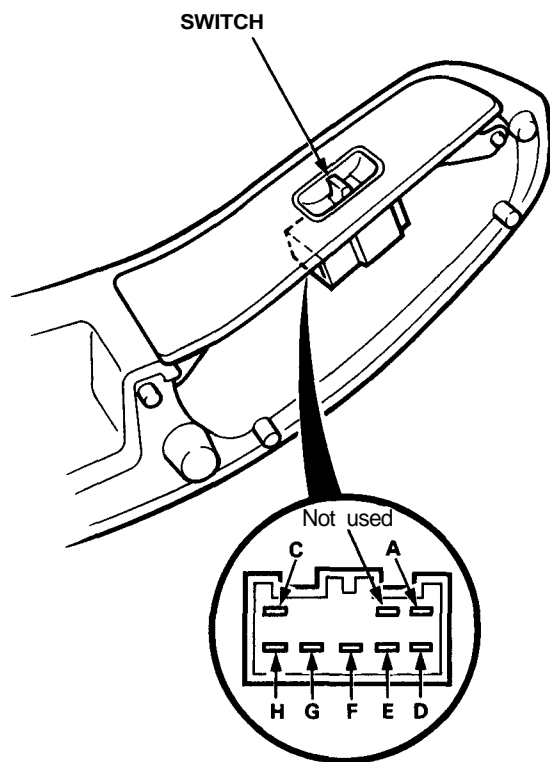

Driver's Window Motor Test

Motor Test:

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 4-P connector from the driver's door wire harness.

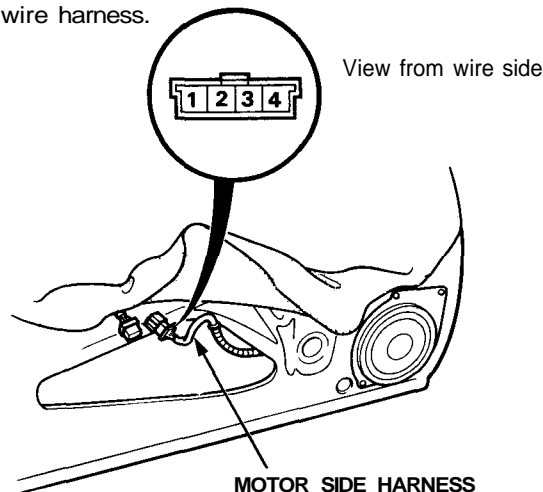

3. Test the motor in each direction by connecting power and ground according to the table.

Terminal	3	4
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.

Pulser Test:

Connect the test leads of an analog ohmmeter to the No. 1 and No. 2 terminals and check for needle movement while running the motor by connecting battery power to the No. 3 and No. 4 terminals. The analog ohmmeter needle should move back and forth alternately.

