

# Power Windows

## Passenger's Window Motor Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 2-P connector from the motor.
3. Test the motor in each direction by connecting power and ground according to the table.

Terminal	1	2
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

**CAUTION:** When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.

NOTE: Right front motor is shown, rear motors are similar.

